



Penningvac Transmitter

PTR225RN

PTR90RN

Operating instructions 301106080_002_C6



Copyright notice

©Leybold GmbH. All rights reserved.

Published: 9/23/2025

Trademark credit

Leybold and the Leybold logo are trademarks of Leybold GmbH, Bonner Strasse 498, D-50968 Cologne.

Conflat® is a registered trademark of Agilent Technologies, Inc.

Disclaimer

The content of this manual may change from time to time without notice. We accept no liability for any errors that may appear in this manual, nor do we make any expressed or implied warranties regarding the content. As far as practical we have ensured that the products have been designed and constructed to be safe and without risks when properly installed and used in accordance with their operating instructions.

We accept no liability for loss of profit, loss of market or any other indirect or consequential loss whatsoever.

Product warranty and limit of liability are dealt with in our standard terms and conditions of sale or negotiated contract under which this document is supplied.

You must use this product as described in this manual. Read the manual before you install, operate, or maintain the product. For manual enquiries, email documentation@leybold.com.

Contents

1 Safety and compliance.	7
1.1 Definition of Warnings and Cautions.	7
1.2 Trained personnel	7
1.3 Safety symbols.	8
2 Introduction.	9
2.1 Description.	9
2.2 Item number and characteristic matrix.	10
3 Technical data.	13
3.1 Operating and storage conditions.	13
3.2 Manufacturing materials.	13
3.3 Performance data.	13
3.4 Mechanical data.	14
3.5 Dimension drawing.	14
3.6 Electrical data.	15
3.6.1 ID resistor.	15
3.6.2 Pressure output signal.	15
3.6.3 Control inputs.	16
3.6.4 Setpoint.	17
4 Installation.	19
4.1 Unpack and inspect.	19
4.2 Install the gauge.	19
4.3 Gauge connections.	20
4.3.1 Connect the gauge to the vacuum system.	20
4.3.2 Connect the gauge to the electrical equipment.	20
4.3.3 Maximum cable length.	27
5 Operation.	28
5.1 LED indicator.	29
5.2 Pressure measurement.	30
5.2.1 Gauges with log-linear pressure output.	31
5.3 Gas dependency.	34
5.4 Advanced functions.	37
5.4.1 Setpoint adjustment.	37
5.4.2 Pulsed LED indicator on/off.	38

Contents

5.4.3 Dark Mode on/off.	38
5.4.4 Restore user selectable parameters to default/previous values.	39
5.4.5 Operation errors.	39
5.4.6 Bakeout.	40
6 Maintenance.	41
6.1 PTR90RN adjustment.	41
6.1.1 Atmosphere adjustment.	41
6.1.2 Vacuum adjustment.	41
6.1.3 Remote adjustment.	41
6.1.4 Adjustment for new tube.	42
6.2 Replace the gauge tube.	42
7 Fault finding.	44
8 Disposal.	46
9 Spares.	47
10 Accessories.	48
11 Service.	49
11.1 Return the equipment or components for service	49
11.2 Calibration.	49
12 Appendix - Multi function button operation.	50
13 Legal declarations.	52

List of Figures

Figure 1. General view.	10
Figure 2. Item number matrix.	11
Figure 3. Item characteristic matrix.	12
Figure 4. Electrical connectors.	20
Figure 5. PTR225RN FCC68 with HV status output (matched voltage output).	23
Figure 6. PTR225RN FCC68 with HV status output (standard voltage output).	23
Figure 7. PTR225RN 9 pin D-SUB with solid state relay and HV status output.	24
Figure 8. PTR90RN FCC68 with HV status output (matched voltage output).	24
Figure 9. PTR90RN FCC68 with HV status output (standard voltage output).	25
Figure 10. PTR90RN FCC68 with solid state relay and HV status output.	25
Figure 11. PTR90RN 9 pin D-SUB with solid state relay and HV status output.	26
Figure 12. PTR225RN [blank].	32
Figure 13. PTR225RN [O].	32
Figure 14. PTR225RN [Q].	33
Figure 15. PTR90RN [blank], [G].	33
Figure 16. PTR90RN [Q].	34
Figure 17. PTR225RN and PTR90RN gas dependency.	34
Figure 18. PTR225RN gas dependency.	35
Figure 19. PTR90RN gas dependency.	35
Figure 20. PTR90RN gas dependency.	36
Figure 21. Adjustment of PTR225RN/PTR90RN.	37
Figure 22. Replace the gauge tube.	43
Figure 23. Replacement gauge tube.	47
Figure 24. Replacement electronic housing.	47
Figure 25. PTR225RN Multi function button operation.	50
Figure 26. PTR90RN Multi function button operation.	51

List of Tables

Table 1: Options.	10
Table 2: Operating and storage conditions.	13
Table 3: Material exposed to vacuum.	13
Table 4: Performance data PTR225RN.	13
Table 5: Performance data PTR90RN.	14
Table 6: Mechanical data.	14
Table 7: Electrical data.	15
Table 8: ID resistor.	15
Table 9: Pressure output signal PTR225RN.	15
Table 10: Pressure output signal PTR90RN.	16
Table 11: PTR225RN control input - HV enable.	16
Table 12: PTR90RN control input - remote calibration.	16
Table 13: PTR225RN Setpoint.	17
Table 14: PTR90RN Setpoint.	17
Table 15: Status output.	17
Table 16: Solid state relay variants ("S" characteristic).	18
Table 17: Checklist of items.	19
Table 18: Pins on the PTR225RN electrical connector.	21
Table 19: Pins on the PTR90RN electrical connector.	21
Table 20: Maximum cable length.	27
Table 21: LED Pattern PTR225RN.	29
Table 22: LED Pattern PTR90RN.	29
Table 23: Voltage output characteristic formulae PTR225RN.	31
Table 24: Voltage output characteristic formulae PTR90RN.	31
Table 25: Error indication.	40
Table 26: Faults.	44
Table 27: Operating units.	48
Table 28: Active gauge cable - Type A.	48
Table 29: Active gauge cable - Type H.	48

1 Safety and compliance

For safe operation from the start, read these instructions carefully before you install or commission the equipment and keep them safe for future use. Read all the safety instructions in this section and the rest of this manual carefully and make sure that you obey these instructions.

The instruction manual is an important safety document that we often deliver digitally. It is your responsibility to keep the instruction manual available and visible while working with the equipment. Please download the digital version of the instruction manual for use on your device or print it if a device will not be available.

1.1 Definition of Warnings and Cautions

Important safety information is highlighted as warning and caution instructions which are defined as follows. Different symbols are used according to the type of hazard.

WARNING:

If you do not obey a warning, there is a risk of injury or death.

CAUTION:

If you do not obey a caution, there is a risk of minor injury, damage to equipment, related equipment or process.

NOTICE:

Information about properties or instructions for an action which, if ignored, will cause damage to the equipment.

We reserve the right to change the design and the stated data. The illustrations are not binding.

1.2 Trained personnel

For the operation of this equipment “trained personnel” are:

- skilled workers with knowledge in the fields of mechanics, electrical engineering, pollution abatement and vacuum technology and
- personnel specially trained for the operation of vacuum pumps

Safety and compliance

1.3 Safety symbols

The safety symbols on the products show the areas where care and attention is necessary.

The safety symbols that we use on the product or in the product documentation have the following meanings:

	Warning/Caution Risk of injury and/or damage to equipment. An appropriate safety instruction must be followed or a potential hazard exists.
	Warning - Dangerous voltage Risk of injury. Identifies possible sources of hazardous electrical shock.
	Warning - High magnetic field Risk of injury or damage to equipment. Identifies a possible source of a magnetic field capable of disrupting equipment including pacemakers.
	Warning - Risk of explosion Risk of injury or damage to equipment. Identifies a situation that could result in an explosion.
	Warning - Overpressure Risk of increased pressure beyond permissible limit.
	WEEE symbol The equipment must be discarded carefully. Obey local and national regulations for disposal of this equipment.
	Warning - Magnetic field High magnetic fields may be present. Pacemakers or other similar implanted devices may be affected.

2 Introduction

2.1 Description

This document applies to the PTR225RN and PTR90RN series of products. The PTR225RN and PTR90RN are inverted magnetron vacuum gauges. The pressure is measured indirectly as a function of the current which flows in a crossed field Townsend discharge generated within the magnetron cell.

The PTR90RN is considered a wide range gauge as it additionally incorporates a Pirani filament. Using the principle of thermal conductivity in which the rate of heat loss from a heated filament is dependent on the pressure of the gas surrounding the filament, it is possible to indirectly measure up to atmospheric pressure.

The PTR90RN also incorporates a unique striking mechanism consisting of a small incandescent filament mounted adjacent to the magnetron cell. This filament is automatically ignited, providing enough emission electrons to initiate the discharge.

The gauges incorporate microprocessor control of various features:


- Automatic control of the discharge voltage in the magnetron cell during the ignition of the gauge.
- Reduction of the discharge voltage in the magnetron cell after ignition in order to enhance the lifetime of the gauge.
- Error monitoring to help identify the exact cause of failure.
- Simple adjustment of setpoint trip levels.

Referring to [Figure: General view](#)

- The gauge has a detachable tube that allows the replacement of the tube or electronics housing in the event of failure.
- The gauge has a multi-function button on the top of the gauge for navigation through the various menus within the gauge.
- An LED indicator surrounding the circumference of the top of the gauge provides the status indication and aids the adjustment of the gauge when you navigate through the menus.
- The gauge is available with different electrical connectors, voltage scaling and vacuum flanges to integrate with the customer process.

Introduction

Figure 1. General view

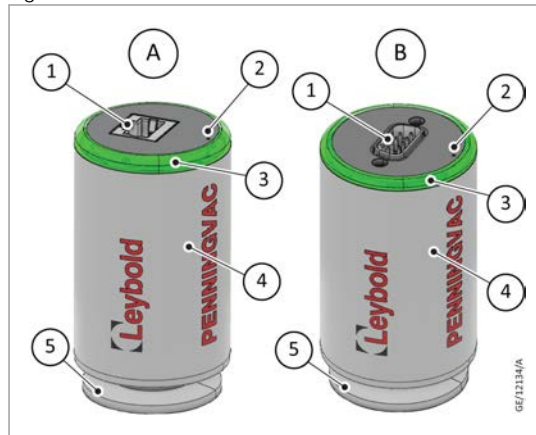

A. Gauge with FCC68 connector

B. Gauge with 9 pin D-SUB connector

1. Electrical connector
3. LED indicator
5. Vacuum flange

2. Multi function button
4. Electronics housing

2.2 Item number and characteristic matrix

The range of PTR225RN and PTR90RN is highly configurable. The characteristics of a particular product are defined through the product item number or description. The characteristics in the table that follows can be selected at the point of purchase.

Table 1. Options

Characteristic*	Description
Voltage output	Different transfer functions including matched voltage outputs to ensure compatibility with most vacuum gauges available on the market
Setpoint	Solid state relay
Flange	Different vacuum flanges are available
Connector	Different electrical connectors are available

* Not all permutations of characteristics are possible. Refer to [Figure: Item characteristic matrix](#) and [Figure: Item number matrix](#).

Introduction

Figure 2. Item number matrix

Product family									
2 Inverted magnetron gauge									
3 Wide range gauge									
2 2 L 0 1 2 1 2 0 0									
Setpoint *									
0 HV status output									
1 Solid state relay setpoint and HV status output									
Flange									
2 : 25KF flange									
3 : 40KF flange									
4 : DN40 Conflat® flange									
5 : 25KF flange (extended tube)									
Connector *									
1 : FCC68 connector									
2 : 9 pin D-subminiature (male)									
Voltage output									
Inverted magnetron gauge:									
0 : 0.667V to 10.0V log linear with pressure									
3 : 1.5V to 8.5V log linear with pressure									
4 : 1.5V to 4.4375V log linear with pressure									
Wide range gauge:									
0 : 1.4V to 8.6V log linear with pressure									
2 : 1.4V to 8.6V log linear with pressure									
4 : 1.5V to 6.9375V log linear with pressure									


* PTR225RN Penningvac transmitters with solid state relay setpoint and HV status output are only available with [9 pin D-SUB] (male) connector options

PTR225RN Penningvac transmitters with HV status output are only available with FCC68 connector options

PTR90RN Penningvac transmitters with [9 pin D-SUB] (male) connector options are only available with solid state relay setpoint and HV status output

Introduction

Figure 3. Item characteristic matrix

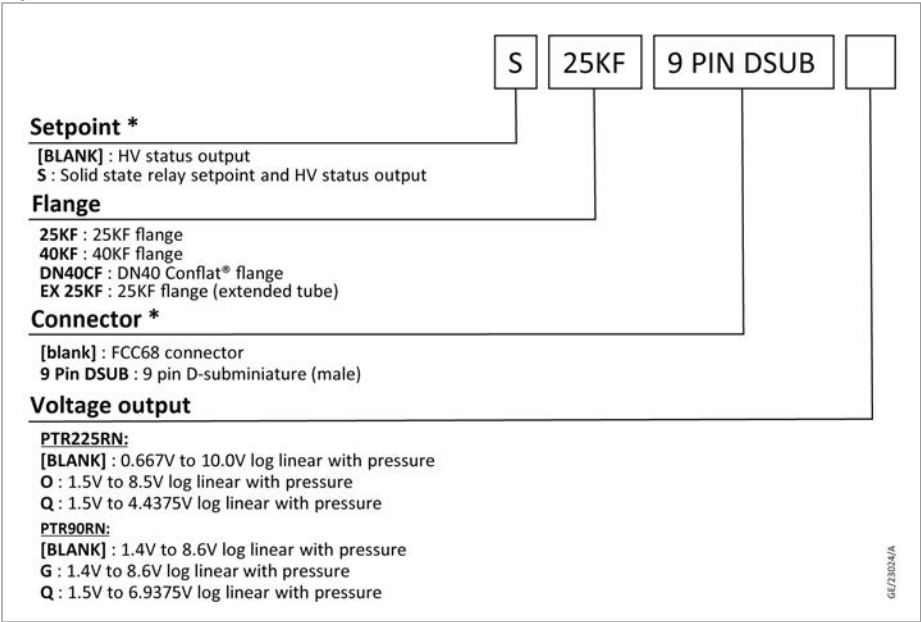

* PTR225RN Penningvac transmitters with solid state relay setpoint and HV status output are only available with [9 pin D-SUB] (male) connector options

PTR225RN Penningvac transmitters with HV status output are only available with FCC68 connector options

PTR90RN Penningvac transmitters with [9 pin D-SUB] (male) connector options are only available with solid state relay setpoint and HV status output

3 Technical data

3.1 Operating and storage conditions

Table 2. Operating and storage conditions

Parameter	Value	
	PTR225RN	PTR90RN
Ambient operating temperature range	+5 °C to +60 °C Indoor use only	
Ambient storage temperature range	-30 °C to +70 °C	
Bakeout temperature	150 °C with electronics removed	
Humidity	80%RH up to 31 °C decreasing linearly to 50% RH at 40 °C and above	
Maximum altitude	3000 m	
Maximum internal pressure	10 bar absolute (9 bar gauge)	
Pollution degree	2	
Pirani filament temperature	N/A	≈95 °C
Striking aid temperature	N/A	≈1500 °C

3.2 Manufacturing materials

Table 3. Material exposed to vacuum

Where used	Material exposed to vacuum	
	PTR225RN	PTR90RN
Tube	Stainless steel 316L, 304L	
Magnetron cell	Stainless steel 304, 430	
Feedthrough	Stainless steel 304, 347, Ni-Fe, glass	
Pirani filament	N/A	W
Striking aid	N/A	W

3.3 Performance data

Table 4. Performance data PTR225RN

Characteristic	Pressure range	Typical accuracy (N ₂)
Voltage output		
PTR225RN		
[blank], [O] (log-linear with pressure)	1 x 10 ⁻⁹ – 1 x 10 ⁻² mbar	±30% reading
[Q] (log-linear with pressure)	1 x 10 ⁻⁸ – 7.5 x 10 ⁻³ Torr	±30% reading

Technical data

Table 5. Performance data PTR90RN


Characteristic	Pressure range	Typical accuracy (N ₂)
Voltage output		
PTR90RN		
[blank], [G] (log-linear with pressure)	1 x 10 ⁻⁹ – 1 x 10 ³ mbar	±30% reading up to 1 x 10 ⁻³ mbar, ±15% reading to 10 mbar
[Q] (log-linear with pressure)	1 x 10 ⁻⁸ – 7.5 x 10 ² Torr	±30% reading up to 7.5 x 10 ⁻⁴ Torr, ±15% reading to 7.5 Torr

3.4 Mechanical data

Table 6. Mechanical data

Characteristic		Value	Unit
Dimensions		Refer to <i>Dimension drawing</i> on page 14	mm
Enclosure rating		IP40	-
Mass	KF25	350	g
	KF40	380	
	DN40CF	630	
Internal volume of tube			
Flange	KF25	≈20	cm ³
	KF40		
	DN40CF		

3.5 Dimension drawing

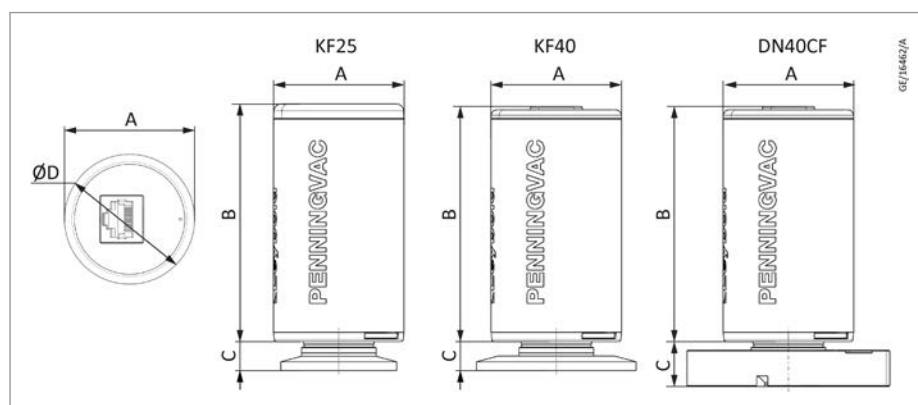

	Dimension (mm)			
Flange	A	B	C	D
KF25	45	82	10	46
KF40	45	81.5*	10	46
DN40CF	45	81.5*	15.5	46
KF25 (extended tube)	45	82	22	46

*The 9-pin D-SUB (male) connector is 0.5 mm shorter than the FCC68 variant.

3.6 Electrical data

Table 7. Electrical data

Parameter	Data
Electrical supply voltage	15 to 48 V d.c. nominal $\pm 10\%$ Limited-energy circuit/source in accordance with IEC 61010-1
Maximum power consumption	
PTR225RN	4 W
PTR90RN	
Maximum inrush current	
PTR225RN	220 mA
PTR90RN	270 mA
Electrical connector	9 pin D-SUB male FCC68 8 pin
Minimum load impedance	10 k Ω
Maximum output current	1 mA



Note:

National Electrical Code (NEC) Class 2 or Limited Power Source (LPS) are also accepted.

3.6.1 ID resistor

Table 8. ID resistor

	ID resistor
PTR225RN	100 k Ω
PTR90RN	85 k Ω

3.6.2 Pressure output signal

Table 9 Pressure output signal PTR225RN

Characteristic	Pressure measurement output signal	Error voltages	
Voltage output	output signal	Error	Voltage
PTR225RN with standard voltage output			
[blank]	V=0.667 – 10.00 V	Unable to initiate arc	0.15 V
(log linear with pressure)	0.4 V: gauge disabled	EEPROM error	0.29 V
PTR225RN with matched voltage output			
[O]	V=1.50 – 8.50 V	Unable to initiate arc	0.15 V
(log-linear with pressure)	0.4 V: gauge disabled	EEPROM error	0.29 V
[Q]	V=1.50 – 4.4375 V	Unable to initiate arc	0.15 V
(log-linear with pressure)	0.4 V: gauge disabled	EEPROM error	0.29 V

Technical data

Table 10 Pressure output signal PTR90RN

Characteristic	Pressure measurement output signal	Error voltages	
Voltage output		Error	Voltage
PTR90RN with standard voltage output			
[blank] (log linear with pressure)	V=1.40 – 8.60 V	Unable to initiate arc	0.15 V
		EEPROM error	0.29 V
		Pirani failure	10.20 V
PTR90RN with matched voltage output			
[G] (log linear with pressure)	V=1.40 – 8.60 V	Unable to initiate arc	0.15 V
		EEPROM error	0.29 V
		Pirani failure	10.20 V
[Q] (log linear with pressure)	V=1.50 – 6.9375 V	Unable to initiate arc	0.15 V
		EEPROM error	0.29 V
		Pirani failure	10.20 V

3.6.3 Control inputs

Table 11. PTR225RN control input - HV enable

Characteristic		Data	
Setpoint	Voltage output		
[blank]	[blank], [O], [Q]	HV enable (High):	HV on: > 11.0 V
			HV off: < 5.0 V
[blank], [S]	[blank], [O], [Q]	HV enable (Low)	HV on: < 2.5V
			HV off: > 4.0 V

Table 12. PTR90RN control input - remote calibration

Characteristic	Data
Voltage output	
[blank], [G], [Q]	Remote calibration: < 1.5 V*

* Remote calibration is not available on variants with both FCC68 connector [blank] options and Solid-state relay and HV status output [S] characteristics.

3.6.4 Setpoint

Table 13. PTR225RN Setpoint

Characteristic	Setpoint	
Voltage output	Adjustment range	Hysteresis
PTR225RN with standard voltage output		
[blank] (log linear with pressure)	0.667 V – 10.00 V	10% pressure
PTR225RN with matched voltage output		
[O] (log-linear with pressure)	1.50 – 8.50 V	10% pressure
[Q] (log-linear with pressure)	1.50 – 4.4375 V	10% pressure

Table 14. PTR90RN Setpoint

Characteristic	Setpoint	
Voltage output	Adjustment range	Hysteresis
PTR90RN with standard voltage output		
[blank] (log linear with pressure)	1.40 – 8.60 V	10% pressure
PTR90RN with matched voltage output		
[G] (log linear with pressure)	1.40 – 8.60 V	10% pressure
[Q] (log linear with pressure)	1.50 – 6.9375 V	10% pressure

Table 15 Status output

Characteristic		Parameter	Data
Voltage output	Connector		
Standard [blank]	FCC68 [blank]	Maximum external load rating	48 V d.c. maximum, 100 mA (sinking current)
		Status output: ▪ Discharge struck ▪ Discharge not struck	▪ Transistor open ▪ 0 V d.c.
Standard [blank]	9 pin D-subminiature (male) [9 pin D-SUB]	Maximum external load rating	100 mA (sourcing current)
Matched [G], [O], [Q]	FCC68 [blank]	Status output: ▪ Discharge struck	+15 to +48 V d.c. depending on supply voltage
Matched [G], [O], [Q]	9 pin D-subminiature (male) [9 pin D-SUB]	▪ Discharge not struck	Transistor open

Technical data

Characteristic		Parameter	Data
Voltage output	Connector		
A back EMF suppression diode is recommended when an external relay is connected		Back EMF suppression diode	Minimum surge rating 1 A
			Minimum reverse voltage rating 100 V d.c.

Table 16. Solid state relay variants ("S" characteristic)

Parameter	Data
Solid state relay	1 (Quantity)
Form	Single Pole Single Throw (SPST), Normally Open (N.O.)
Rating	48 V d.c. maximum, 500 mA
Relay on series resistance	Typical 0.2 Ω , maximum 0.3 Ω

4 Installation

4.1 Unpack and inspect

1. Remove the packing materials and protective covers.
2. Examine the gauge.
3. If the gauge is damaged, tell the supplier and carrier in writing within three days. Provide:
 - item number of the gauge
 - order number
 - supplier invoice number of the gauge.
4. Keep packing materials for inspection.
5. Do not use the product if it is damaged.
6. If the system is not to be used immediately, put the protective cover and packing materials on the gauge.
7. Store the gauge in applicable conditions. Refer to [Operating and storage conditions](#) on page 13.

Check that your package contains the following items:

Table 17. Checklist of items

Quantity	Description	Check
1	Vacuum gauge	☐
1	Test report	☐
1	Adjustment tool	☐
1	Instruction manual	☐
1	Electronics housing removal tool	☐

4.2 Install the gauge



WARNING: HIGH PRESSURE

Risk of damage to equipment. Use an O-ring with an outer centring ring to connect the gauge to a vacuum system. If the pressure is more than the atmospheric pressure, the standard centring rings are not applicable.



WARNING: CRITICAL APPLICATION

Risk of damage to equipment. Do not use the gauge for safety critical applications. The gauge is not intended to be fail-safe.

To install the gauge, do the procedure as follows:

1. You can install the gauge in any direction.
2. In the factory, the gauge is mounted horizontally and calibrated for nitrogen.
3. Mount the gauge tube in vertical direction to minimise the build up of process particulates and condensable vapours within the gauge.
4. PTR90RN only: For the correct pressure indication at the direction of the installed gauge, calibrate the gauge again at atmospheric pressure.

Installation

5. PTR90RN only: For precision, we recommend that the atmosphere and vacuum adjustment must be done before use. Refer to [Maintenance](#) on page 41.

4.3 Gauge connections

4.3.1 Connect the gauge to the vacuum system

To connect the gauge to the vacuum system:

1. Use an O-ring with an outer centring ring to connect the gauge with an KF25 or KF40 flange to a similar flange on the vacuum system.
2. Use a new copper gasket to connect the gauge with a DN40CF flange to a similar flange on the vacuum system.
3. Make sure that the vacuum system has a correct earth (ground) connection.
4. Connect the tube of the gauge to the vacuum system.

4.3.2 Connect the gauge to the electrical equipment




CAUTION: GAUGE MALFUNCTION

Risk of damage to equipment. Do not make connections to the gauge identification pin as it can cause the gauge to malfunction.

Refer to [Recommended electrical connections](#) on page 21 for schematic diagram of the electrical connections to the gauge. Use the pins on the electrical connector as shown in [Table: Pins on the PTR225RN electrical connector](#) and [Table: Pins on the PTR90RN electrical connector](#) respectively.

Refer to [Technical data](#) on page 13 for more specifications.

Figure 4. Electrical connectors

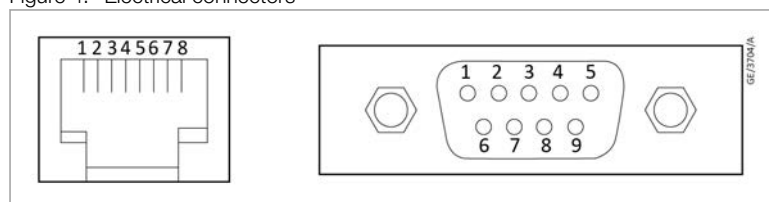

Installation

Table 18 Pins on the PTR225RN electrical connector

Connector	9 pin D-SUB male	FCC68 8 pin
Characteristic	[S] Solid state relay + HV status	[blank] HV status
Pin	Refer to Figure: Electrical connectors	
1	HV on (Low)	Electrical supply positive
2	Electrical supply ground (0V)	Electrical supply ground (0V)
3	Pressure measurement output signal	Pressure measurement output signal
4	Electrical supply positive	ID resistor
5	ID resistor	Signal ground
6	Relay N.O.	HV status
7	Signal ground	HV on (Low)
8	Relay common	HV on (High)
9	HV status	-

Table 19 Pins on the PTR90RN electrical connector

Connector	9 pin D-SUB male	FCC68 8 pin	
Characteristic	[S] Solid state relay + HV status	[blank] HV status	[S] Solid state relay + HV status
Pin	Refer to Figure: Electrical connectors		
1	Remote calibration input	Electrical supply positive	
2	Electrical supply ground (0V)	Electrical supply ground (0V)	
3	Pressure measurement output signal	Pressure measurement output signal	
4	Electrical supply positive	ID resistor	
5	ID resistor	Signal ground	
6	Relay N.O.	HV status	
7	Signal ground	Remote calibration input	Relay N.O.
8	Relay common	Not connected	Relay common
9	HV Status	-	-



Note:

Measure the ID resistor with respect to Signal ground.

Recommended electrical connections

- Do not connect the electrical supply ground to the signal ground. If you connect the electrical supply ground to the signal ground, the gauge output signal will not be accurate.
- When you use the gauge in an electrically noisy environment, make sure your equipment is immune to the interference.



Note:

All the controllers supplied by us have sufficient immunity.

For PTR225RN variants only:

- Referring to [Figure: PTR225RN FCC68 with HV status output \(matched voltage output\)](#) on page 23, [Figure: PTR225RN FCC68](#)

Installation

with [HV status output \(standard voltage output\)](#) on page 23, [Figure: PTR225RN 9 pin D-SUB with solid state relay and HV status output](#) connect a switch between gauge enable and electrical supply ground (0V) or electrical supply positive as appropriate to enable and disable the gauge. Refer to [Table: PTR225RN control input HV enable](#) for information on the electrical requirements for the control input.

For PTR90RN variants only:


- Referring to [Figure: PTR90RN FCC68 with HV status output \(matched voltage output\)](#) on page 24, [Figure: PTR90RN FCC68 with HV status output \(standard voltage output\)](#) on page 25, [Figure: PTR90RN FCC68 with solid state relay and HV status output](#), [Figure: PTR90RN 9 pin D-SUB with solid state relay and HV status output](#), connect a switch between the remote calibration input and electrical supply ground (0V) to adjust the atmosphere or vacuum reading of the Pirani sensor remotely.
- Connect the power supply ground (0V) to the remote calibration input momentarily (>50 ms) to automatically adjust the atmosphere or vacuum reading. Refer to [Maintenance](#) on page 41 section for the procedure. Refer to [Table: PTR90RN control input - remote calibration](#) for information on the electrical requirements for the control input.

Status output:

The status output changes state whenever the discharge in the magnetron cell has struck. The status output can be monitored with a voltmeter or similar. Refer to [Figure: PTR225RN FCC68 with HV status output \(matched voltage output\)](#) on page 23, [Figure: PTR225RN FCC68 with HV status output \(standard voltage output\)](#) on page 23, [Figure: PTR225RN 9 pin D-SUB with solid state relay and HV status output](#), [Figure: PTR90RN FCC68 with HV status output \(matched voltage output\)](#) on page 24, [Figure: PTR90RN FCC68 with HV status output \(standard voltage output\)](#) on page 25, [Figure: PTR90RN FCC68 with solid state relay and HV status output](#), [Figure: PTR90RN 9 pin D-SUB with solid state relay and HV status output](#) and [Table: Status output](#) for information on the electrical requirements.

Installation


Figure 5. PTR225RN FCC68 with HV status output (matched voltage output)

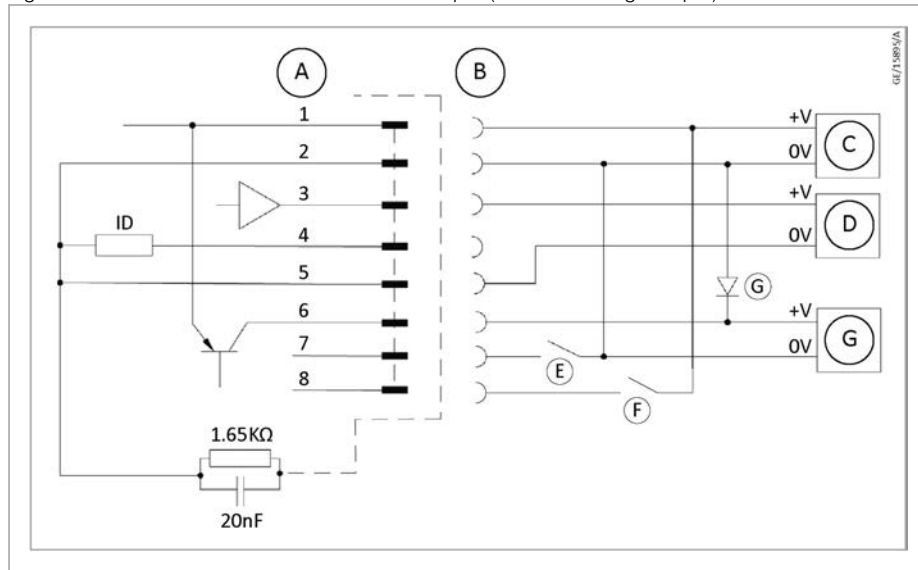

- | | |
|---|-----------------|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. HV on (low) | F. HV on (high) |
| G. Voltmeter and clamping diode* (optional) | |

* Refer to [Table: Status output](#)

Figure 6. PTR225RN FCC68 with HV status output (standard voltage output)

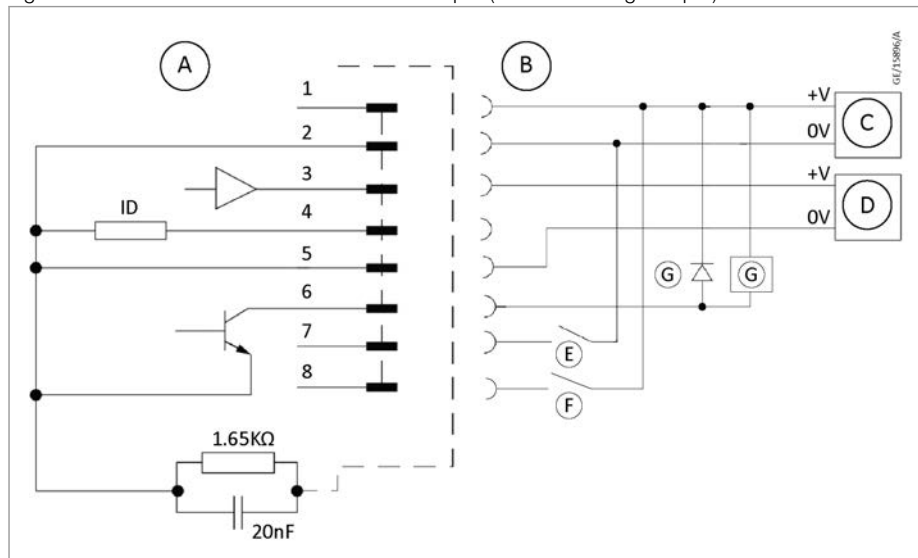


- | | |
|--|-----------------|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. HV on (low) | F. HV on (high) |
| G. DC relay and back EMF suppression diode* (optional) | |

* Refer to [Table: Status output](#)

Installation


Figure 7. PTR225RN 9 pin D-SUB with solid state relay and HV status output

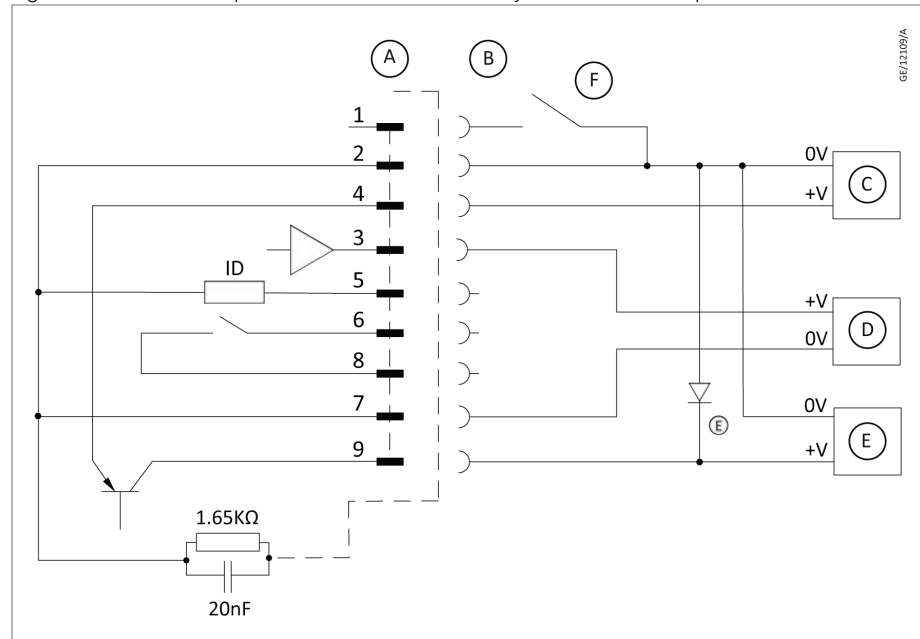

- | | |
|--|----------------|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. Voltmeter and clamping diode*
(optional) | F. HV on (low) |

* Refer to [Table: Status output](#)

Figure 8. PTR90RN FCC68 with HV status output (matched voltage output)

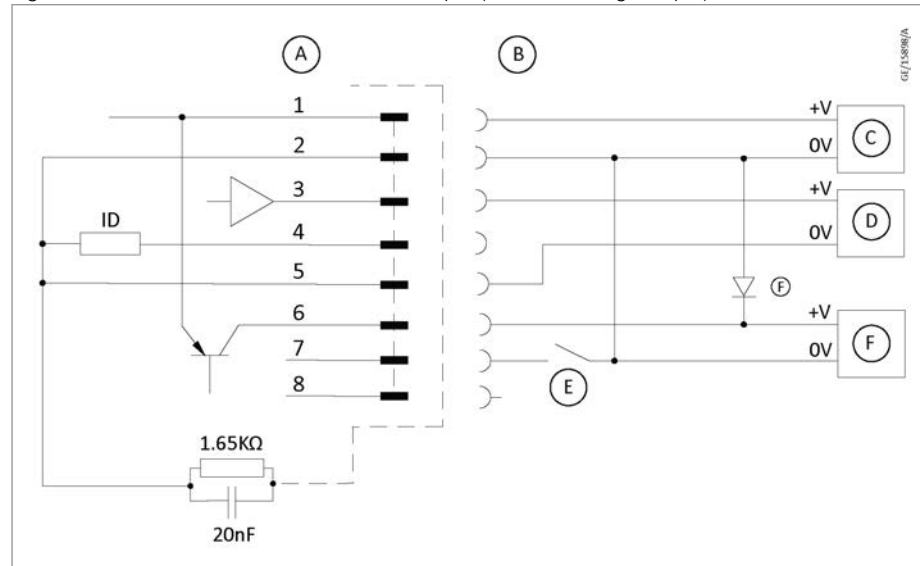


- | | |
|--------------------------------|---|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. Grounding switch (optional) | F. Voltmeter and clamping diode* (optional) |

* Refer to [Table: Status output](#)

Installation


Figure 9. PTR90RN FCC68 with HV status output (standard voltage output)

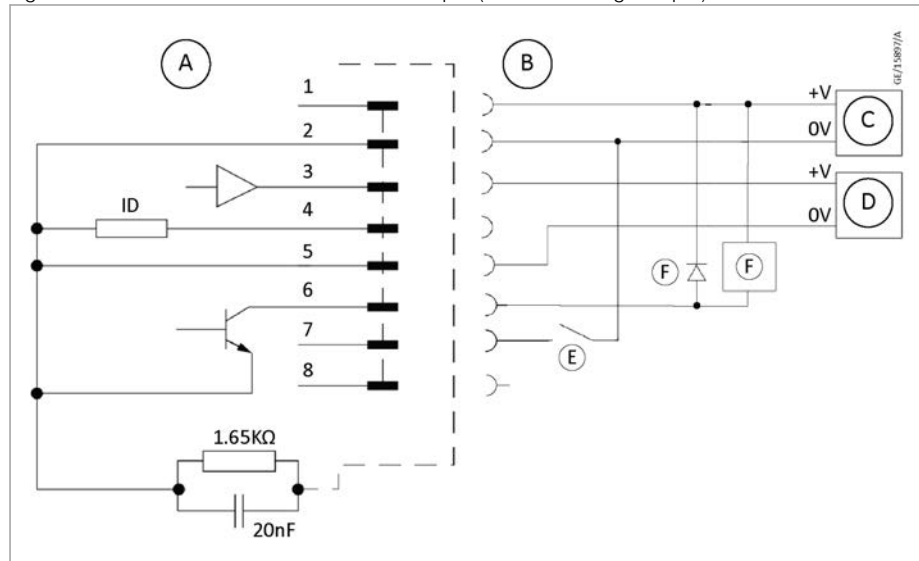

- | | |
|--------------------------------|--|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. Grounding switch (optional) | F. DC relay and back EMF suppression diode* (optional) |

* Refer to [Table: Status output](#)

Figure 10. PTR90RN FCC68 with solid state relay and HV status output

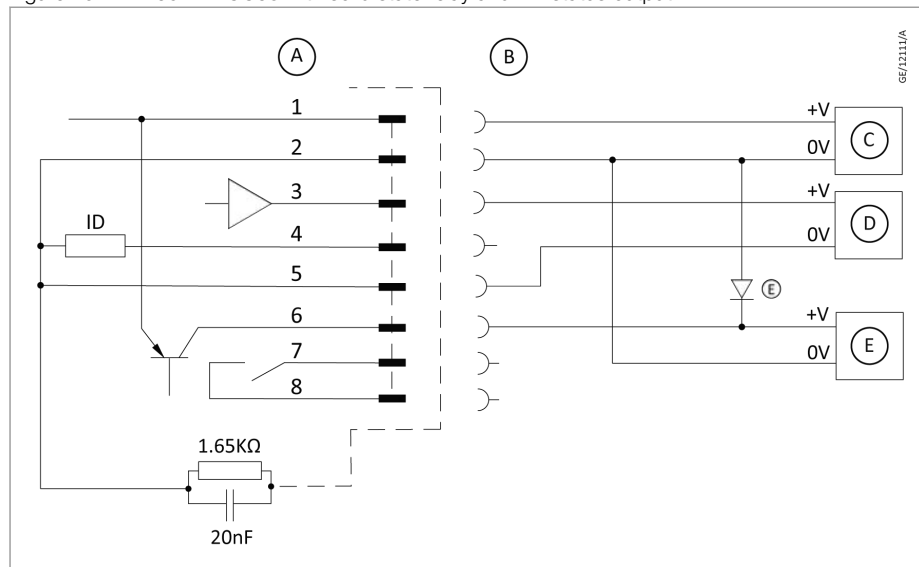


- | | |
|---|--------------|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. Voltmeter and clamping diode* (optional) | |

* Refer to [Table: Status output](#)

Installation

Figure 11. PTR90RN 9 pin D-SUB with solid state relay and HV status output

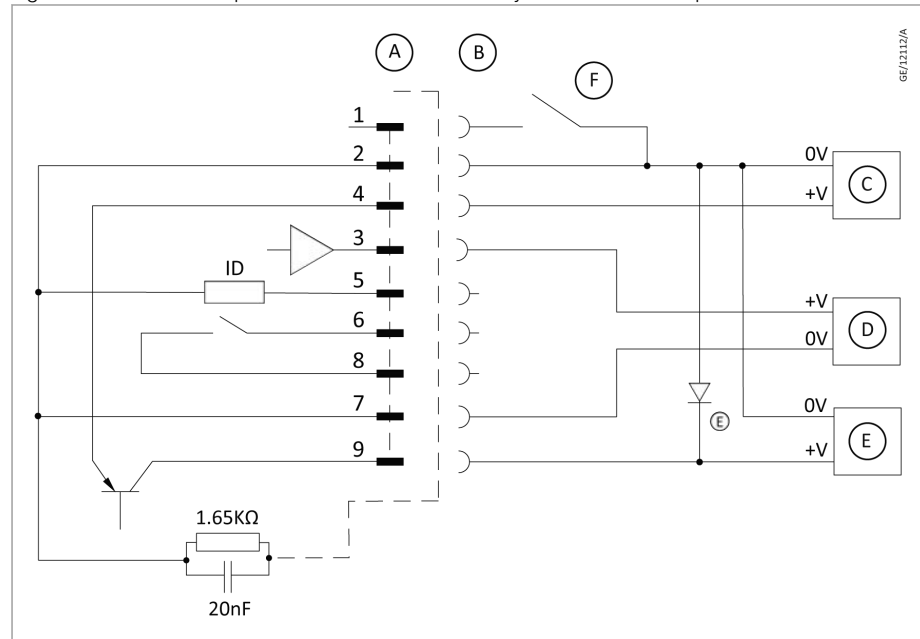

- | | |
|---|--------------------------------|
| A. Gauge | B. Connector |
| C. Electrical supply | D. Voltmeter |
| E. Voltmeter and clamping diode* (optional) | F. Grounding switch (optional) |

* Refer to [Table: Status output](#)

4.3.3 Maximum cable length

The maximum cable length is dependent on the conductor cross section and the supply voltage used.

Table 20. Maximum cable length

Electrical supply voltage	Maximum cable length (24AWG)
15 V	100 m
48 V	1000 m

The common mode signal voltage (that is, the voltage between the signal common and supply common) can be significant with long cables due to the voltage drop in the cable. For accurate pressure measurements, do not connect the electrical supply ground to signal ground. Both ground connections are linked within the gauge.

Operation

5 Operation



WARNING: MAGNETIC FIELD

Risk of injury. Magnetic field may interfere with pacemakers. Maintain a distance of minimum 10 cm between the gauge and the heart pacemaker. Use anti-magnetic shields to prevent the influence of the strong magnetic field.



WARNING: MAGNETIC FIELD

Risk of injury or damage to equipment. The gauge incorporates magnets. Keep away from heart pacemakers, computers, credit cards and any other magnetically sensitive devices.



WARNING: EXPLOSION HAZARD

Risk of injury or damage to equipment. Do not use the gauge to measure explosive or flammable gases or mixtures.



WARNING: ELECTRICAL HAZARD

Risk of electric shock. Do not disconnect the electronics and magnet housing from the body tube when the body tube is connected to the vacuum system. If there is a plasma discharge in the vacuum system near the body tube, the body tube can become electrically charged.

PTR225RN:



WARNING: ELECTRICAL HAZARD

Risk of injury or damage to equipment. Never operate the PTR225RN when it is disconnected from the vacuum system or when there are explosive or flammable gases in the surrounding atmosphere or the vacuum system. High voltages (up to 4.5 kV) are generated inside the body tube of the PTR225RN; these could cause injury to people or could be a source of ignition.



CAUTION: GAUGE MALFUNCTION

Risk of damage to equipment. Do not operate the gauge at pressures above 1×10^{-2} mbar. If the gauge is operated at pressures greater than 1×10^{-2} mbar it may fail prematurely.

PTR90RN:



WARNING: OVER-PRESSURISE

Risk of injury or damage to equipment. When you measure the pressure of gases of high molecular weight, the pressure indicated can be below the true pressure. Make sure that the gauge is not over-pressurised when using heavy gases.



WARNING: HIGH FILAMENT TEMPERATURE

Risk of injury or damage to equipment. Do not use the gauge to measure the pressure of explosive or flammable gases or mixtures. The gauge has a heated filament which operates approximately at 100 °C and a striker filament which operates approximately at 1500 °C. The temperature of the filaments can be higher in fault conditions.

5.1 LED indicator

When the gauge is connected to a power supply the LED indicator will illuminate and flash red for approximately 5 seconds while the gauge is initialising. The LED indicator indicates the gauge status:

PTR225RN:

- Blue - gauge is disabled
- Flashing yellow - gauge initiating discharge in the magnetron cell (striking)
- Green - gauge is operating correctly
- Red - an error is detected. Refer to [Fault finding](#) on page 44.

PTR90RN:

- Green - gauge is operating correctly
- Red - an error is detected. Refer to [Fault finding](#) on page 44.

Normal operation

During normal operation, the LED indicator pulses to provide approximate indication of the measured pressure.

Table 21 LED Pattern PTR225RN

Pressure band	Colour	Change Rate	
		High intensity (s)	Low intensity (s)
Pressure $\leq 1 \times 10^{-6}$ mbar	Green	Continuous	N/A
$1 \times 10^{-6} < \text{Pressure} \leq 1 \times 10^{-4}$ mbar		0.5	0.5
Pressure $> 1 \times 10^{-4}$ mbar		1	1

Table 22 LED Pattern PTR90RN

Pressure band	Colour	Change Rate	
		High intensity (s)	Low intensity (s)
Pressure $\leq 1 \times 10^{-4}$ mbar	Green	Continuous	N/A
$1 \times 10^{-4} < \text{Pressure} \leq 1 \times 10^{-1}$ mbar		0.5	0.5
Pressure $> 1 \times 10^{-1}$ mbar		1	1

The pulsing operation (low intensity/high intensity) is switched on by default but can be disabled (refer to [Pulsed LED indicator on/off](#) on page 38). If pulsing is disabled, the LED will be green continuously during normal operation.

It is possible to switch the green/blue LED indicator off during normal operation by enabling dark mode (refer to [Dark Mode on/off](#) on page 38).

Operation

**Note:**

The pulsing function and dark mode state is unaffected by power cycling the gauge.

Error indication

If an error occurs within the gauge, the LED indicator will illuminate red and flash. Refer to [Fault finding](#) on page 44.

5.2 Pressure measurement

Pressure measurement PTR225RN

In order to measure pressure, the PTR225RN must first be enabled. Refer to [Table: Pins on the PTR225RN electrical connector](#) and either [Figure: PTR225RN FCC68 with HV status output \(matched voltage output\)](#) on page 23 and [Figure: PTR225RN FCC68 with HV status output \(standard voltage output\)](#) on page 23, or [Figure: PTR225RN 9 pin D-SUB with solid state relay and HV status output](#) depending on the product; connect gauge enable to supply voltage ground (0V) or electrical supply positive as appropriate to enable the gauge. When the connection to supply voltage ground (0V) or electrical supply positive is removed, the gauge will be disabled.

Alternatively, the PTR225RN can be enabled using the multi-function push-button. Refer to [Appendix - Multi function button operation](#) on page 50. Do the procedure that follows to enable/disable the gauge:

1. Select the gauge enable/disable function using the multi-function push button (LED indicator permanently indicating yellow).
2. Confirm the selection by momentarily pressing and releasing the multi-function push button.
3. The LED indicator will flash yellow while the discharge is initiated (strikes).
4. Once the gauge has struck, the LED indicator will turn green.
5. To disable the gauge, repeat the process. The LED indicator will turn blue when disabled.

**Note:**

Manually enabling and disabling the gauge using the multi-function push button will change the gauge state from disabled → enabled or from enabled → disabled regardless of the state of the gauge enable connection.

The multi-function push button is disabled while the gauge is attempting to strike and when an error condition is detected.

When using the gauge with our controller, manually enabling and disabling the gauge is not recommended as the controller may not indicate the correct state of the gauge.

Pressure measurement PTR225RN and PTR90RN

The PTR90RN gauge is enabled as soon as power is applied to the gauge and the discharge is initiated (strikes) when the pressure is appropriate.

In the event of a gauge not striking within 30 minutes, the gauge displays an error voltage and the LED indicator flashes red. Refer to [Fault finding](#) on page 44.

It is possible to read the pressure from the gauge using a controller or by reading the gauge voltage with a voltmeter and converting the indicated voltage to pressure.

If the gauge has a standard voltage output characteristic, if connected to our controller, the display will indicate the measured pressure. Refer to [Table: Pressure output signal PTR90RN](#).



Note:

The pressure must be above 1×10^{-9} mbar for the gauge to identify whether it has struck. Ensure that PTR225RN is enabled, or power is applied to the PTR90RN, when the pressure is above 1×10^{-9} mbar.

The PTR90RN will display the lower limit of the Pirani (1×10^{-4} mbar) while the gauge attempts to strike.



Note:

The gauge models with matched voltage outputs are not compatible with our controllers. The gauge may not be recognised or the pressure output may not be correct.

5.2.1 Gauges with log-linear pressure output

If the gauge is connected to a voltmeter, convert the voltage (V) to pressure (P) according to the formulae in the following table:

Table 23 Voltage output characteristic formulae PTR225RN

Characteristic	Formula: $10^{(V - a)/b}$				
Voltage output		P (mbar)	P (Torr)	P (Pascals)	Range of formula
PTR225RN					
[blank] (log-linear with pressure)	a:	12.667	12.833	10.000	V = 0.67 – 10.00
	b:	1.333	1.333	1.333	
[O] (log-linear with pressure)	a:	10.500	10.625	8.500	V = 1.50 – 8.50
	b:	1.000	1.000	1.000	
[Q] (log-linear with pressure)	a:	5.438	5.500	4.438	V = 1.50 – 4.44
	b:	0.500	0.500	0.500	

Table 24 Voltage output characteristic formulae PTR90RN

Characteristic	Formula: $10^{(V - a)/b}$				
Voltage output		P (mbar)	P (Torr)	P (Pascals)	Range of formula
PTR90RN					
[blank], [G] (log-linear with pressure)	a:	6.800	6.875	5.600	V = 1.40 – 8.60
	b:	0.600	0.600	0.600	
[Q] (log-linear with pressure)	a:	5.438	5.500	4.438	V = 1.50 – 6.94
	b:	0.500	0.500	0.500	

Voltage to pressure conversion for PTR225RN and PTR90RN

The following figures shows the variation in pressure with voltage for the different output characteristics of the PTR225RN and PTR90RN.

Operation

Figure 12. PTR225RN [blank]

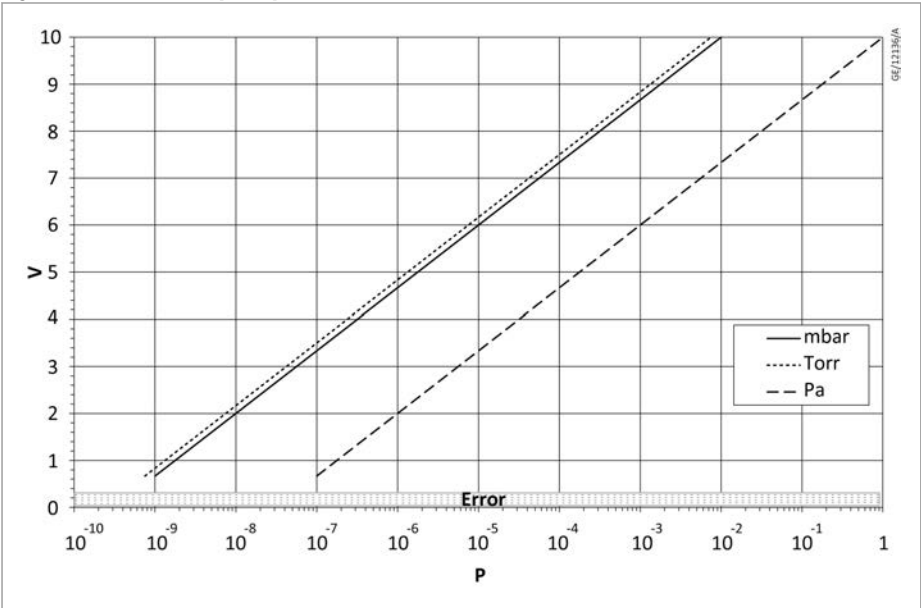


Figure 13. PTR225RN [O]

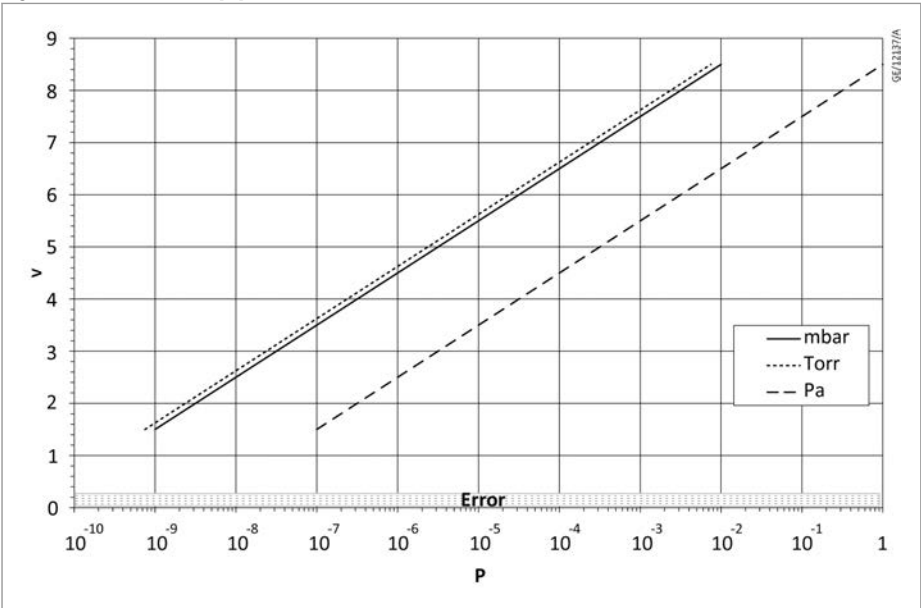


Figure 14. PTR225RN [Q]



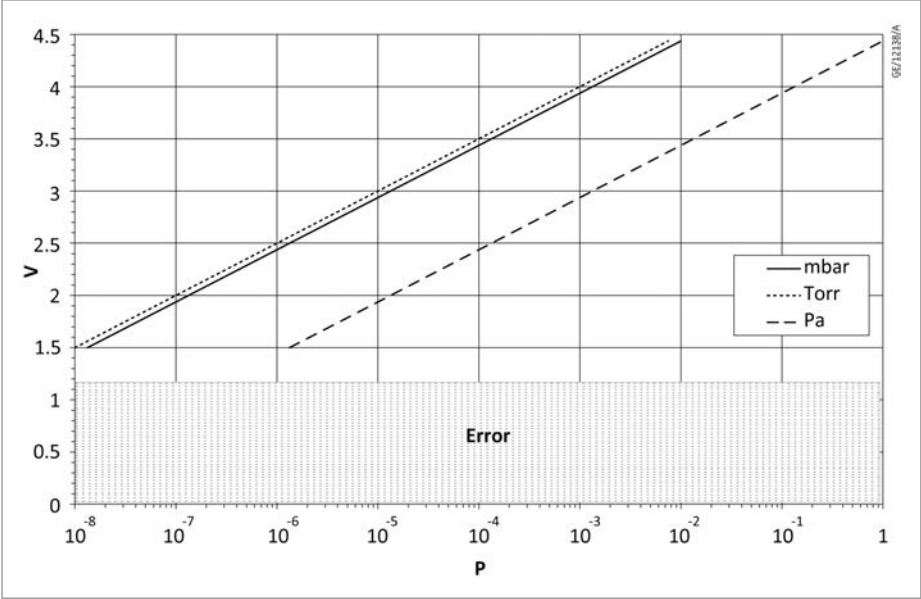


Figure 15. PTR90RN [blank], [G]

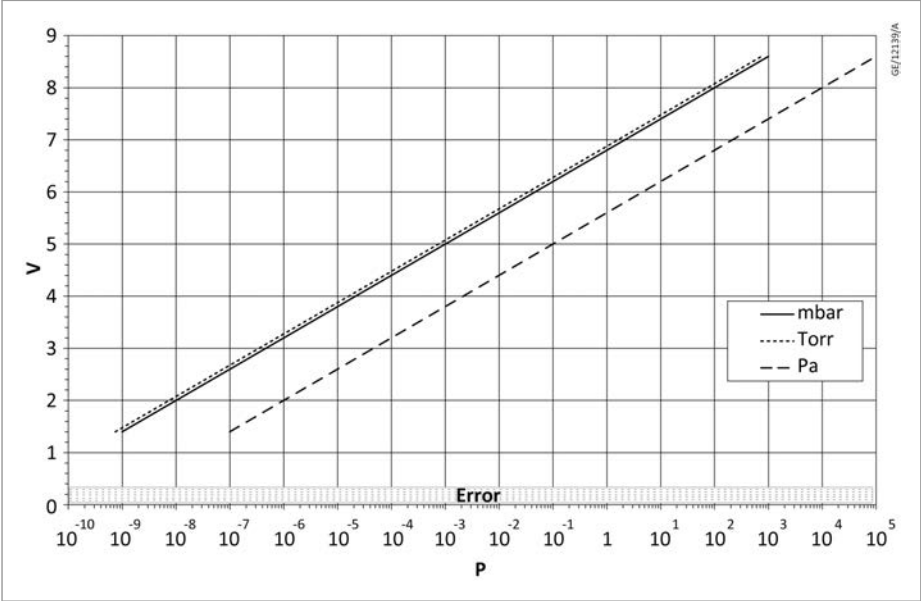

Operation

Figure 16. PTR90RN [Q]

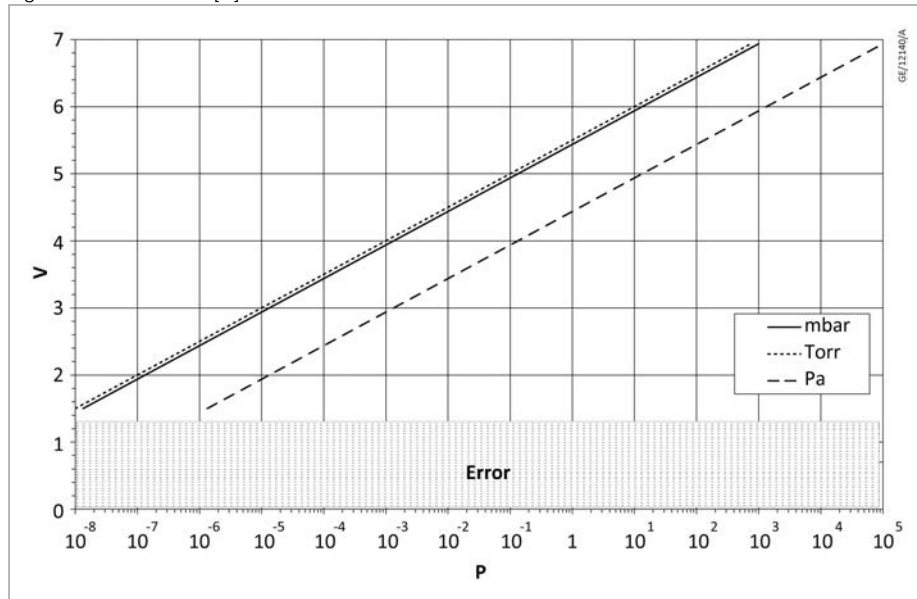

5.3 Gas dependency

The gauge is calibrated for the use in nitrogen and will read correctly with dry air. For other gases a conversion is necessary to get the correct pressure reading. The following figures show the variation in indicated pressure for 7 common gas types.

Figure 17. PTR225RN and PTR90RN gas dependency

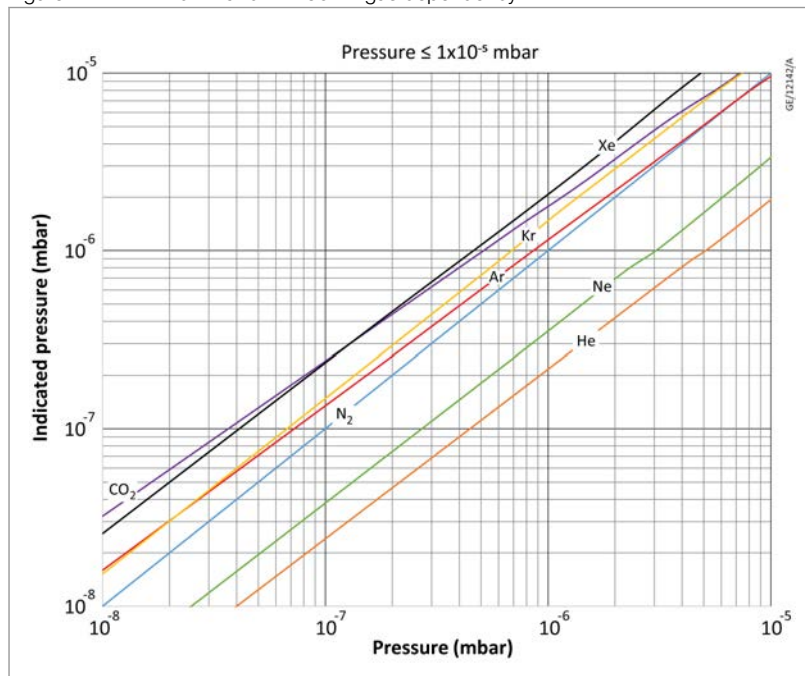


Figure 18. PTR225RN gas dependency



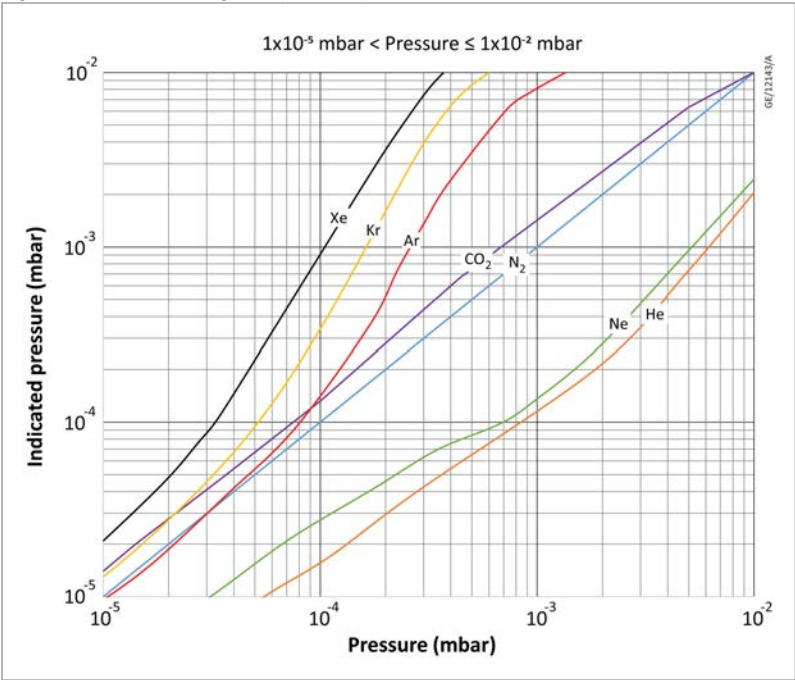


Figure 19. PTR90RN gas dependency

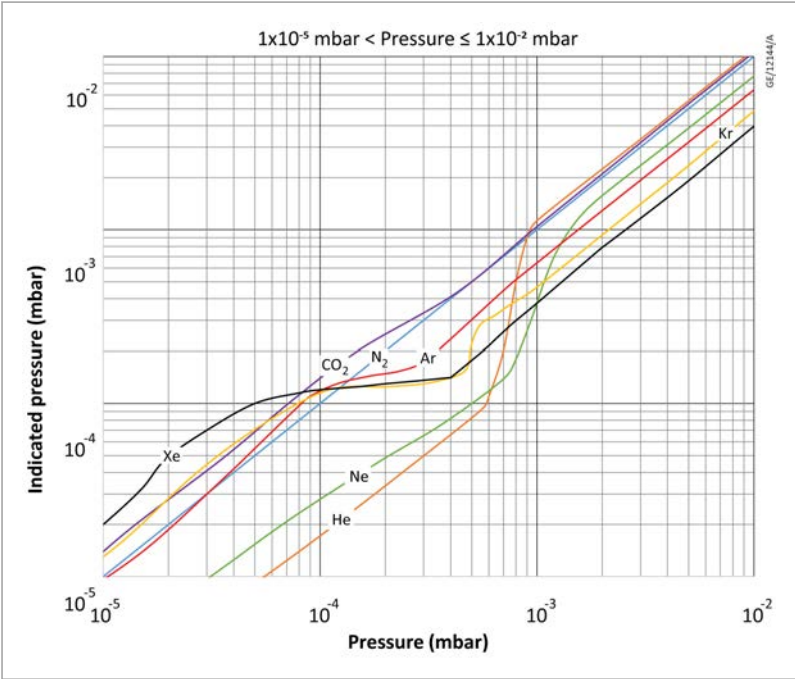

Operation


Figure 20. PTR90RN gas dependency

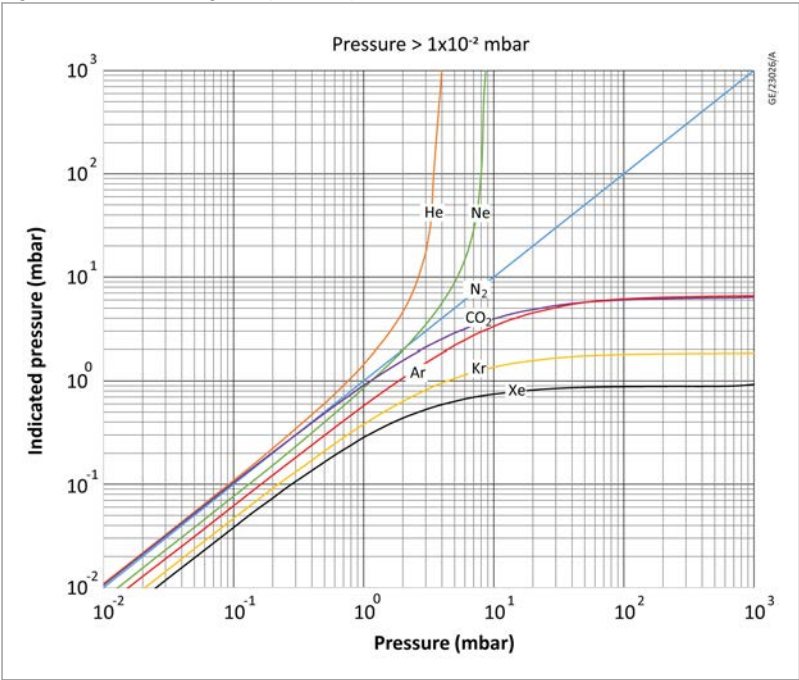

5.4 Advanced functions

Access to additional functions can be achieved through the pressing of a multi-function button located on the top of the gauge. The multi-function button can be used during the operation and maintenance of the gauge. A tool for the purpose of adjustment is provided with the product.

Figure 21. Adjustment of PTR225RN/PTR90RN

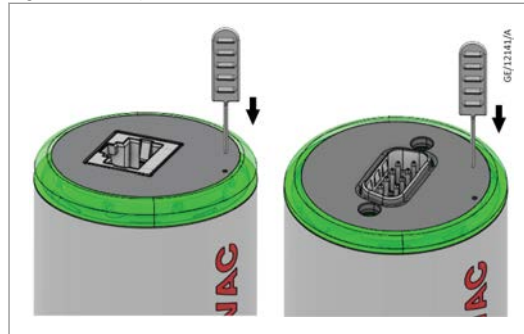

1. Press the button and the LED indicator changes colour and begins flashing. If the button remains depressed, the colour of the flashing indicator changes every 2 seconds to allow the selection of different functions.
2. Release the button when the desired function is reached.
3. When the button is released the LED indicator stops flashing and remains permanently lit. The colour of the indicator signifies the selected function.
4. Press the button momentarily to confirm the selection. If not pressed within 5 seconds, the gauge reverts to normal operation.

Detailed information on how to select the various functions available can be found in [Appendix - Multi function button operation](#) on page 50.

5.4.1 Setpoint adjustment



CAUTION: SETPOINT MALFUNCTION

Risk of damage to equipment. When you operate the setpoint adjustment function, the pressure measurement output signal will change to indicate the setpoint value. Do not use the setpoint adjustment function if the change in output could cause a malfunction of your system.



Note:

For gauge models without a setpoint, the setpoint function is omitted when the LED indicator cycles through the available functions.

Refer to [Appendix - Multi function button operation](#) on page 50, select the setpoint adjustment function using the push button. Do the procedure that follows for the setpoint adjustment:

Operation

1. When the setpoint adjustment function is selected (LED indicator permanently illuminates purple), press momentarily to confirm the selection and release the multi-function push-button.
 - The pressure measurement output signal will change to indicate the setpoint threshold.
 - The LED indicator will blink to indicate the commencement of setpoint adjustment.

 Note:

If the multi-function button is not released within 5 seconds, the gauge will skip to the next step in the process.

2. To adjust the threshold, press and hold the button.
 - The setpoint threshold will increase steadily. Release the button when the desired threshold is reached.
 - To make finer adjustments, release the button before the desired threshold is reached and then make smaller adjustments by pressing the button several times. The output will step up in increments of approximately 10 mV.
 - When the setpoint threshold reaches the upper limit of the adjustment range (refer to [Setpoint](#) on page 17) the setpoint will step to the lower limit of the range and start increasing again.
 - The LED indicator will blink to signify the end of the adjustment process and return to normal operation after the button has been released for 5 seconds.
3. When the measured pressure is less than the setpoint pressure the relay closes (low impedance) or the transistor output changes to on.
4. When the pressure rises above the setpoint threshold by the hysteresis value, the relay opens (high impedance) or the transistor output changes to off. Hysteresis values depend on the model of the gauge. Refer to [Setpoint](#) on page 17 for hysteresis values.

5.4.2 Pulsed LED indicator on/off

Select the pulsed LED on/off function using the multi-function push-button. Refer to [Appendix - Multi function button operation](#) on page 50.

When the function is selected, the LED indicator indicates pink and remains permanently lit. Confirm the selection by momentarily pressing and releasing the multi-function push-button. The LED indicator will flash rapidly for 3 seconds to indicate that the operation is complete before it reverts to illuminating green with the pulsed indicator changed.

5.4.3 Dark Mode on/off

To switch the LED indicator off during normal operation it is possible enable dark mode. Enable dark mode using the multi-function push-button. Refer to [Appendix - Multi function button operation](#) on page 50.

When the function is selected, the LED indicator indicates rose and remains permanently lit. Confirm the selection by momentarily pressing and releasing the multi-function pushbutton. The LED indicator will flash rapidly for 3 seconds to indicate the operation is complete before entering dark mode. Repeat the process to disable dark mode and switch the LED indicator back on.

5.4.4 Restore user selectable parameters to default/previous values

It is possible to restore the setpoint values, LED indicator pulsing state or dark mode state to default values.

In the event of making an unintentional change to the LED indicator, dark mode state or setpoint values, it is also possible to rectify the error by restoring the previous values / state.

LED/setpoint default

The following procedure restores the LED indicator state to pulsing, dark mode state to dissabled and the setpoints to their minimum values:

1. Select the LED/setpoint default function using the multi-function push-button (LED indicator permanently indicating white).
2. Confirm the selection by momentarily pressing and releasing the multi-function push-button.
3. The LED indicator will flash white to indicate the operation is being performed.
4. After 3 seconds, the LED indicator stops flashing and the LED indicator pulsing state, dark mode state and setpoint are restored to factory values.

Restore previous LED/setpoint values

The following procedure restores the LED indicator pulsing state, dark mode state and setpoints to their previous values:

1. Select the “restore previous LED/setpoint values” function using the multi-function push-button (LED indicator permanently indicating teal).
2. Confirm the selection by momentarily pressing and releasing the multi-function push-button.
3. The LED indicator will flash teal to indicate the operation is being performed.
4. After 3 seconds, the LED indicator stops flashing and the LED indicator pulsing state, dark mode state and setpoint are restored to their previous values.

5.4.5 Operation errors

If a gauge error occurs during operation, then the LED indicator illuminates to signify an error.

When an operational error is detected, the LED indicator will flash red and the pressure measurement output signal will change to signify the error condition. The multi-function push button is disabled when the gauge detects an error condition. Any setpoints that are on will switch off automatically. The gauge will remain in the error state until the cause is eliminated and the power to the gauge is cycled.

In the case of the PTR225RN, the gauge will be disabled and the discharge will be switched off. In the case of the PTR90RN the discharge will be switched off automatically if it is currently on.

If the multi-function push-button is held down for more than 1 minute, the LED indicator turns solid red. The pressure measurement output signal and setpoint are unaffected. When the button is released, the LED indicator returns to normal operation.

Operation

Table 25 Error indication

LED indication			Meaning	Cause	Error voltage
Colour	Change rate				
	On (s)	Off (s)			
Red	0.5	0.5	EEPROM error	Gauge memory corrupted	Refer to Pressure output signal on page 15
			Pirani failure	Calibration could not be achieved, calibration performed at incorrect pressure	
				Filament broken, temperature compensator broken, tube not fully inserted	
				Unable to initiate arc	
			Inverted magnetron did not strike within 30 minutes of being enabled		
	Permanently on	Button stuck	Multi-function push button has been stuck down for > 60 seconds	N/A	

If you use our controller, a message is shown on the display

5.4.6 Bakeout

In some Ultra High Vacuum (UHV) applications it is desirable to bake the vacuum system components to achieve a lower base pressure. The tube of the gauge can be baked to 150 °C but the electronics housing must be removed.

- Refer to [Figure: Replace the gauge tube](#), remove the electronics housing.
- Bake the tube on your vacuum system. Do not exceed 150 °C.
- Allow the tube to cool before refitting the electronics housing.

6 Maintenance

6.1 PTR90RN adjustment

Atmosphere and vacuum adjustment

Every gauge is adjusted before shipment however thermal conductivity gauges can drift with time or as contamination builds up on the filament. You can adjust the atmosphere and vacuum settings of the gauge to eliminate the effects of such drift. The frequency of adjustment will vary depending on the level and nature of the contamination associated with the process.



Note:

The gauge can determine whether to perform atmosphere or vacuum adjustment based on the measured pressure. If the adjustment is performed at an inappropriate pressure, the Pirani failure is triggered. Refer to [Fault finding](#) on page 44.

6.1.1 Atmosphere adjustment

1. Supply power to the gauge, make sure the LED indicator is green and allow the gauge to warm up at atmospheric pressure in nitrogen or dry air for at least 10 minutes.
2. Refer to [Appendix - Multi function button operation](#) on page 50, select the atmosphere or vacuum adjustment function using the multi-function push-button.
3. When the atmosphere or vacuum adjustment function is selected (LED indicator is permanently indicating cyan), confirm the selection by momentarily pressing and releasing the multi-function push-button.
4. The LED indicator will flash cyan to indicate the operation is being performed.
5. After 3 seconds, the LED indicator stops flashing and the atmosphere adjustment parameters are stored in the gauge.

6.1.2 Vacuum adjustment

1. Reduce the system pressure to 1×10^{-6} mbar (or less).
2. Operate the gauge for at least 10 minutes.
3. Refer to [Appendix - Multi function button operation](#) on page 50, select the atmosphere or vacuum adjustment function using the multi-function push-button.
4. When the atmosphere or vacuum adjustment function is selected (LED indicator is permanently indicating cyan), confirm the selection by momentarily pressing and releasing the multi-function push-button.
5. The LED indicator will flash cyan to indicate the operation is being performed.
6. After 3 seconds, the LED indicator stops flashing and the vacuum adjustment parameters are stored in the gauge.

6.1.3 Remote adjustment

The PTR90RN has a remote adjustment feature. You can perform atmosphere and vacuum adjustment through the appropriate pin on the electrical connector.

Maintenance

1. Refer to [Table: Pins on the PTR90RN electrical connector](#) depending on the electrical connector on your gauge. Refer to [Table: PTR90RN control input - remote calibration](#) for information on the electrical requirements for the control input.
2. Momentarily (> 100 ms) connect the remote calibration input to the electrical supply ground (0V) and the atmosphere or vacuum adjustment will be performed.

6.1.4 Adjustment for new tube

If a replacement tube is installed to the gauge it is necessary to match the characteristics of the gauge with the new tube.

1. Make sure that the gauge is at atmospheric pressure in nitrogen or dry air. Supply power to the gauge.
2. Make sure that the LED indicator is green. Refer to the [Appendix - Multi function button operation](#) on page 50, select the tube adjustment function using the multi-function push button.
3. When the tube adjustment function is selected (LED indicator is permanently indicating orange), confirm the selection by momentarily pressing and releasing the multi-function push button.
4. The LED indicator will flash orange to indicate the operation is being performed.
5. After 5 minutes, the LED indicator stops flashing and the tube adjustment parameters are stored in the gauge.
6. After performing adjustment for new tube, atmosphere adjustment and vacuum adjustment is recommended.

6.2 Replace the gauge tube

You must install a replacement tube to the gauge if:

- the gauge tube is contaminated
- the atmosphere or vacuum adjustment cannot be achieved (PTR90RN only)
- either the Pirani or striker filaments are broken (PTR90RN only).

Follow instructions below to replace the tube:


Refer to [Figure: Replace the gauge tube](#).

1. Unplug the electrical cable, vent the vacuum system to atmospheric pressure and remove the gauge from the vacuum system.
2. Referring to images A and B, using the electronics housing removal tool supplied with the product, insert the tool into the underside of the electronics housing and partially pull out the retaining clip from the side of the gauge.
3. Referring to image C and D, place the housing removal tool directly into the retaining clip and gently release the clip.
4. Pull the tube from the electronics housing.
5. Install the replacement tube into the electronics housing with the correct alignment ensuring that the tube is pressed fully home.
6. Lock the tube in place by pressing the retaining clip fully home. The clip should appear as in image A.

Whenever a new tube is installed it is necessary to adjust the gauge to match the new tube. Refer to [Adjustment for new tube](#) on page 42.

Maintenance

Figure 22. Replace the gauge tube

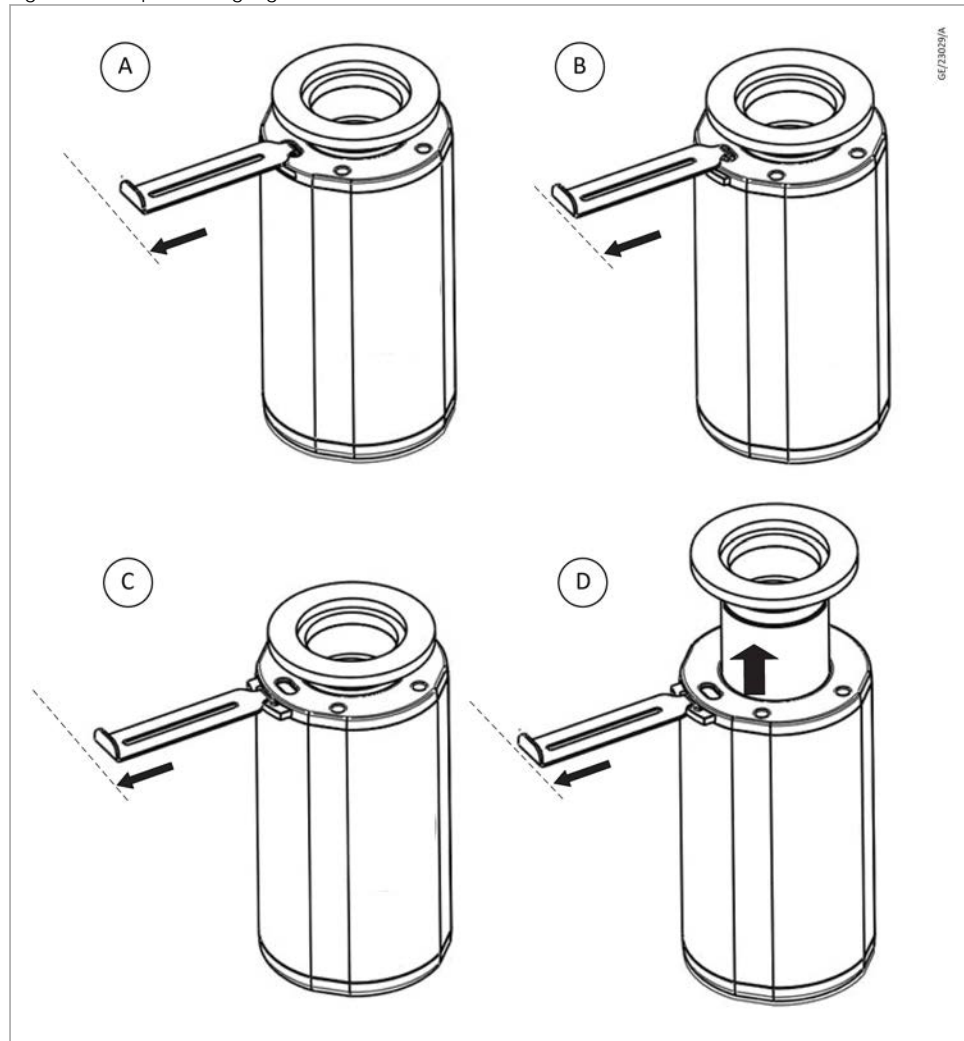

Fault finding

7 Fault finding

Table 26. Faults

Fault
LED not lit on page 44
Pressure reading incorrect on page 44
Gauge shows Pirani failure on page 44
Gauge shows Unable to initiate arc on page 45

Fault	LED not lit
Cause	Incorrect electrical supply voltage. Supply polarity reversed
Remedy	Check the electrical supply and connections.

Fault	Pressure reading incorrect
Cause	Gauge is displaying error voltage
Remedy	Refer to Pressure output signal on page 15.
Cause	Vacuum leak
Remedy	Leak check vacuum system.
Cause	New tube has been installed
Remedy	Perform Adjustment for new tube on page 42.
Cause	Pirani filament has drifted and requires adjustment
Remedy	Do the atmosphere and vacuum adjustments.
Cause	Tube is contaminated
Remedy	Replace the tube.
Cause	Gauge is measuring gas with different properties to that of nitrogen or dry air
Remedy	Refer to Gas dependency on page 34.
Cause	Adjustment undertaken at incorrect pressure
Remedy	Repeat the adjustment but make sure that the pressure is at atmosphere or vacuum.

Fault	Gauge shows Pirani failure
Cause	Atmosphere adjustment performed at incorrect pressure
Remedy	Perform atmosphere adjustment at atmospheric pressure.
Cause	Vacuum adjustment performed at incorrect pressure
Remedy	Perform vacuum adjustment at correct pressure.

Fault finding

Cause	Adjustment for new tube has been performed at incorrect pressure
Remedy	Perform adjustment for new tube at correct pressure.
Cause	Tube has drifted outside permissible limits and can not be adjusted
Remedy	Replace the tube.
Cause	New tube has been installed
Remedy	Perform adjustment for new tube.
Cause	Pirani filament broken
Remedy	Replace the tube.
Cause	Tube has not been correctly fitted into electronics housing
Remedy	Make sure that the tube has been fully pushed home and the retaining clip correctly fitted in place.
Cause	Temperature compensator open circuit
Remedy	Replace the tube.

Fault	Gauge shows Unable to initiate arc
Cause	Striker filament is broken
Remedy	Replace the tube.
Cause	The gauge is contaminated and has not struck within 30 minutes
Remedy	Replace the gauge tube.
Cause	The gauge has been switched on at too low a pressure
Remedy	Raise the pressure to $> 1 \times 10^{-9}$ mbar and switch on the gauge.

Disposal

8 Disposal

- Dispose of the gauge, components and accessories safely as per all local and national safety and environmental requirements.
- You can recycle the gauge and cables. Contact us or the supplier for more information.
- The gauge and cables are in the scope of the European Directive on Waste Electrical and Electronic Equipment, 2012/19/EU.
- For European customers, we offer a recycling service for the gauge and cables at the end of the product's life.
- Be careful if the gauge is contaminated with dangerous process substances.

9 Spares

Order the spare parts and accessories from our nearest company or distributor. When you order provide:

- model and item number of equipment
- serial number (if any)
- item number and description of the part.

Figure 23. Replacement gauge tube

Product family 2 : Inverted magnetron gauge 3 : Wide range gauge										GE/16452/A
E	2		L	0	A		A	A	0	
Flange 2 : 25KF flange 3 : 40KF flange 4 : DN40 Conflat® flange 5 : 25KF flange (extended tube)										

Figure 24. Replacement electronic housing

Product family 2 : Inverted magnetron gauge 3 : Wide range gauge										GE/13038/A
E	2		L	A		A	1		0	
Setpoint * 0 : Transistor setpoint 1 : Solid state relay setpoint										
Connector * 1 : FCC68 connector 2 : 9 pin D-subminiature (male)										
Voltage output Inverted magnetron gauge: 0 : 0.667V to 10.0V log linear with pressure 3 : 1.5V to 8.5V log linear with pressure 4 : 1.5V to 4.4375V log linear with pressure Wide range gauge: 0 : 1.4V to 8.6V log linear with pressure 2 : 1.4V to 8.6V log linear with pressure 4 : 1.5V to 6.9375V log linear with pressure										

* PTR225RN Penningvac transmitters with solid state relay setpoint and HV status output are only available with [9 pin D-SUB] (male) connector options

PTR225RN Penningvac transmitters with HV status output are only available with FCC68 connector options

PTR90RN Penningvac transmitters with [9 pin D-SUB] (male) connector options are only available with solid state relay setpoint and HV status output

Accessories

10 Accessories

Table 27. Operating units

Operating units	Item number
Display one	230001
Display two	230024
Display three	230025
Graphix one	230680V01
Graphix two	230681V01
Graphix three	230682V01

The Active gauge cables suitable for gauges installed with an FCC68 or 9 pin D-SUB connector.

Table 28. Active gauge cable - Type A

Cable length	Item number
Cable type A 5 m (15 feet)	12426
Cable type A 10 m (30 feet)	230012
Cable type A 15 m (50 feet)	12427
Cable type A 20 m (65 feet)	12428
Cable type A 30 m (98 feet)	12429
Cable type A 50 m (150 feet)	12431
Cable type A 75 m (246 feet)	12432
Cable type A 100 m (325 feet)	12433

Table 29. Active gauge cable - Type H

Cable length	Item number
Cable type H "RN" 5 m (15 feet)	230560V01
Cable type H "RN" 10 m (30 feet)	230561V01
Cable type H "RN" 20 m (60 feet)	230563V01

11 Service

11.1 Return the equipment or components for service

Before you send your equipment to us for service or for any other reason, you must send us a completed Declaration of Contamination of Vacuum Equipment and Components – Form HS2. The HS2 form tells us if any substances found in the equipment are hazardous, which is important for the safety of our employees and all other people involved in the service of your equipment. The hazard information also lets us select the correct procedures to service your equipment.

We provide instructions for completing the form in the Declaration of Contamination of Vacuum equipment and Components – Procedure HS1.

Download the latest documents from leybold.com/en/downloads/download-documents/declaration-of-contamination/, follow the procedure in HS1, fill in the electronic HS2 form, print it, sign it, and return the signed copy to us.



NOTICE:

If we do not receive a completed HS2 form, your equipment cannot be serviced.


11.2 Calibration

The calibration service is available for all our gauges. The calibration is done by comparison with reference gauges, traceable to national standards. For more information, contact us.

Appendix - Multi function button operation


12 Appendix - Multi function button operation

Figure 25. PTR225RN Multi function button operation

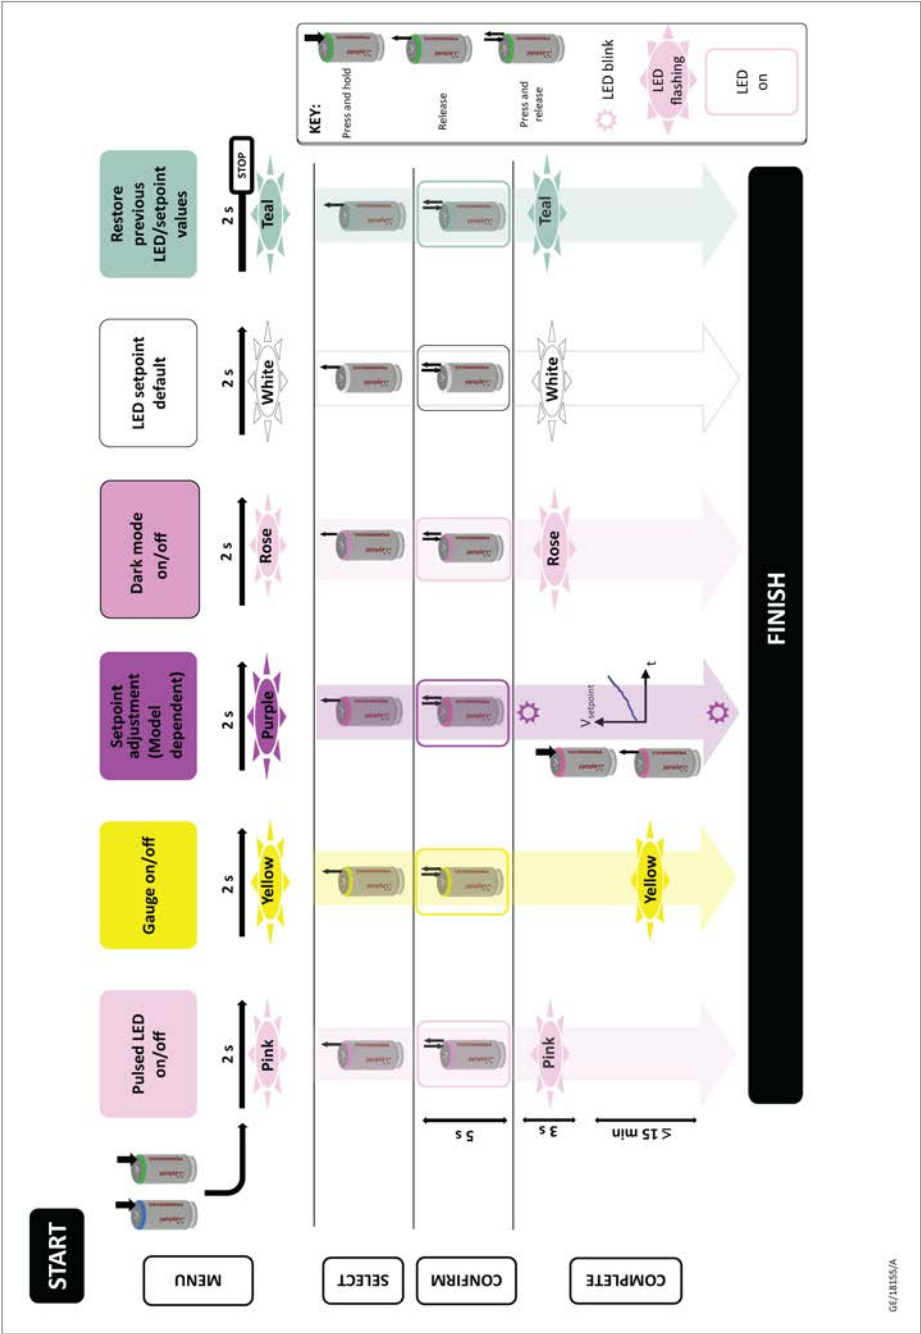

Appendix - Multi function button operation

Figure 26. PTR90RN Multi function button operation

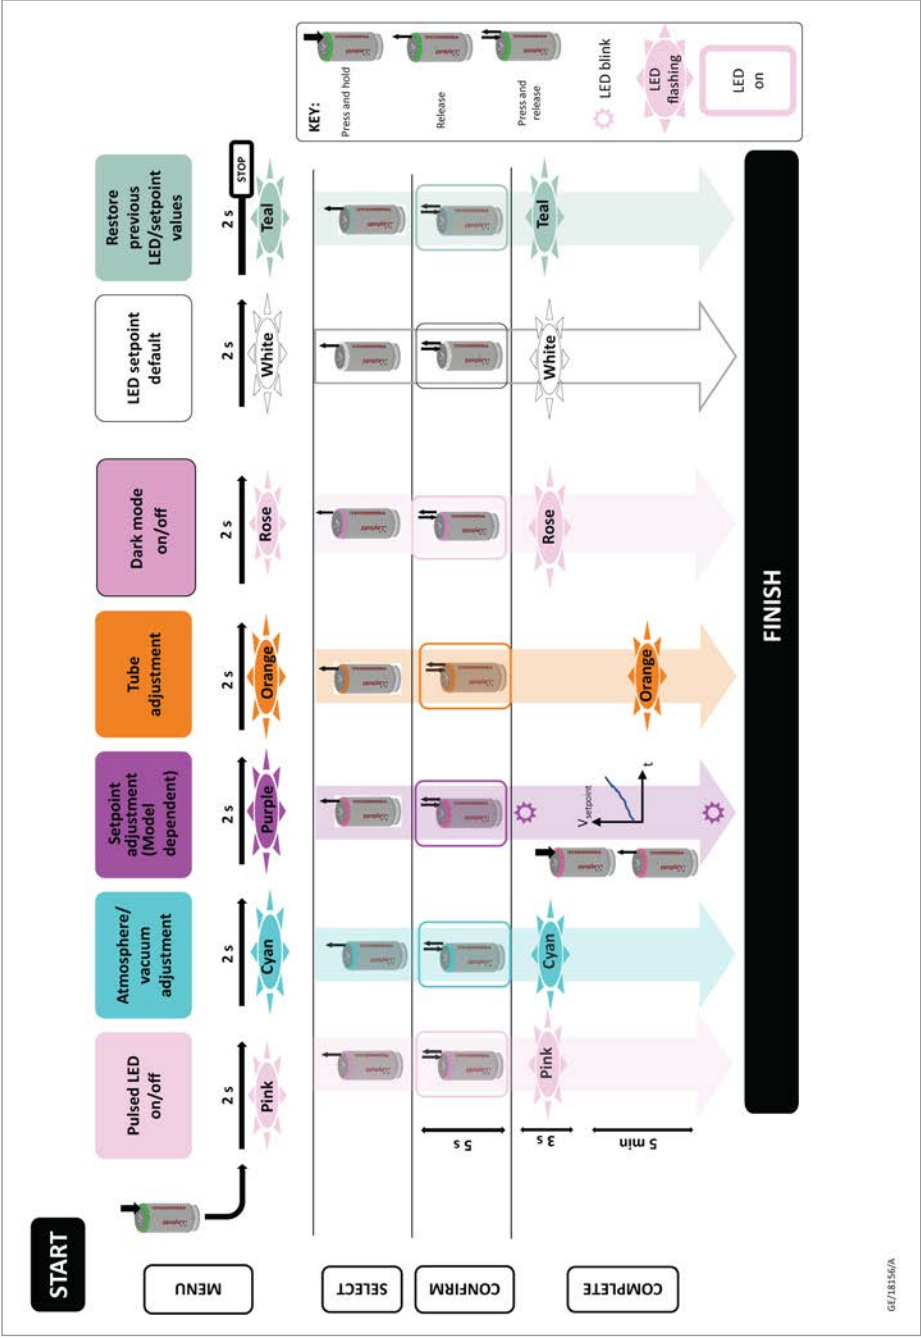



EU Declaration of Conformity

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Leybold GmbH
Bonner Strasse 498
D-50968 Köln
Germany

Documentation Officer
T: +49(0) 221 347 0
documentation@leybold.com

The product specified and listed below:

PTR225RN Penningvac Transmitter
PTR90RN Penningvac Transmitter

Is in conformity with the relevant Union harmonisation legislation:

2014/30/EU	Electromagnetic compatibility (EMC) directive Class B Emissions, Industrial Immunity
2011/65/EU	Restriction of certain hazardous substances (RoHS) directive as amended by Delegated Directive (EU) 2015/863

Based on the relevant requirements of harmonised standards:

EN IEC 61326-1:2021	Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements
---------------------	---

This declaration, based on the requirements of the listed Directives and EN ISO/IEC 17050-1, covers all product serial numbers from this date on: 2025-09-25

You must retain the signed legal declaration for future reference

This declaration becomes invalid if modifications are made to the product without prior agreement.



Chris Chadwick – Engineering Manager
General Vacuum
Eastbourne, UK



Ed Neuss – General Manager
Product Company Eastbourne

ADDITIONAL LEGISLATION AND COMPLIANCE INFORMATION (EU/UK)

RoHS (EU, UK): Material Exemption Information

This product is compliant with the following Exemptions.

Annex III:

- 6(b) **Lead** as an alloying element in aluminium containing up to 0.4% by weight
- 6(c) Copper alloy containing up to 4% **lead** by weight
- 7(a) **Lead** in in high melting temperature type solder (i.e. lead based alloys containing 85% by weight or more lead)
- 7(c) I Electrical and electronic components containing **lead** in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound

REACH (EU, UK)

This product is a complex article which is not designed for intentional substance release. To the best of our knowledge the materials used comply with the requirements of REACH. The product manual provides information and instruction to ensure the safe storage, use, maintenance and disposal of the product including any substance based requirements.

Article 33.1 Declaration (EU, UK)

This product contains Candidate List Substances of Very High Concern above 0.1%ww by article as clarified under the 2015 European Court of Justice ruling in case C-106/14.

- Lead (Pb)
This substance is present in certain aluminium / brass / electrical or electronic components.

WASTE FRAMEWORK DIRECTIVE (EU)

SCIP Number:

92953784-4064-4855-bec7-ea12a49381ca PTR225RN

09116eb3-f7b8-41a0-9a44-243aaa823610 PTR90RN

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (EU,UK)

This product must be disposed of in accordance with the requirements of the WEEE Directive.

COMPLIANCE INFORMATION – INCORPORATED PRODUCTS AND ASSEMBLIES

ADDITIONAL APPLICABLE REQUIREMENTS

The product is in scope for and complies with the requirements of the following:

Product is certified to CSA-C22.2 No.61010-1-12	Safety requirements for electrical equipment for measurement, control and laboratory use – Part 1: General requirements TÜV Rheinland certificate no. CU72404018
Product is certified to UL61010-1 3 rd Edition	Safety requirements for electrical equipment for measurement, control and laboratory use – Part 1: General requirements TÜV Rheinland certificate no. CU72404018
TSCA PBTs	Regulation of Persistent, Bioaccumulative, and Toxic Chemicals under TSCA Section 6(h) The product does not knowingly or intentionally contain substances in contravention with the above requirements.

材料成分声明

China Material Content Declaration

部件名称 Part name 	有害物质 Hazardous Substances									
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr VI)	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)	邻苯二甲酸二丁酯 Dibutyl phthalate (DBP)	邻苯二甲酸丁基苄酯 Benzyl butyl phthalate (BBP)	邻苯二甲酸双（2-乙基己基）酯 Bis(2-ethylhexyl) phthalate (DEHP)	邻苯二甲酸二异丁酯 Diisobutyl phthalate (DIBP)
铸铝及铝合金制品 Aluminium alloys	X	O	O	O	O	O	O	O	O	O
铜接头 Brass connectors	X	O	O	O	O	O	O	O	O	O
印刷电路组件 (PCA) Printed Circuit Assembly (PCA)	X	O	O	O	O	O	O	O	O	O
O: 表示该有害物质在该部件的所有均质材料中的含量低于 GB/T 26572 标准规定的限量要求。 O: Indicates that the hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572. X: 表示该有害物质在该部件的至少一种均质材料中的含量超出 GB/T26572 标准规定的限量要求。 X: Indicates that the hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.										



Pioneering products. Passionately applied.

Leybold GmbH
Bonner Strasse 498
50968 Cologne
GERMANY
+49-(0)221-347-0
info@leybold.com
www.leybold.com