

LEYCON

User manual 300348748_002_C0/2016

High Vacuum Angle Valve BAV DN 63/100/160 ISO-K

- with manual actuator M
- aluminum version AL
- stainless steel version VA

Part numbers

10780V01

10781V01

10783V01

10784V01



Imprint

Manufacturer Leybold GmbH, D-50968 Cologne, Germany

Website: www.leybold.com
Phone: +49 (0) 221 347 0
Fax: +49 (0) 221 347 1250
Email: info@leybold.com

Publisher Leybold GmbH, D-50968 Cologne, Germany

Editor Leybold GmbH, D-50968 Cologne, Germany

Print Leybold GmbH, D-50968 Cologne, Germany

Copyright © Leybold GmbH 2016

No part of this user manual may be reproduced in any way (photocopies, microfilms or any other reproduction processes) nor may it be manipulated with electronic systems, duplicated or distributed without written permission from Leybold. Offenders are liable to pay damages.

The use of trade names, brand names, trademarks, etc. in this user manual does not entitle third parties to consider these names to be unprotected and to use them freely.

Original document The German language version of this user manual is the original document. All other languages are a translation of the original user manual. In case of deviations the information within the original user manual is valid.

Table of contents

1	Description of product.....	5
1.1	Important information	5
1.2	Identification of product.....	5
1.3	Validity of the user manual.....	5
1.4	Technical data.....	6
1.5	Components delivered with the valve	9
1.6	Warranty.....	9
2	Safety	10
2.1	Compulsory reading material.....	10
2.2	Danger levels	10
2.3	Purpose of use.....	11
2.3.1	Permitted use	11
2.3.2	Adverse use	11
2.4	Obligations / area of responsibility	12
2.4.1	Manufacturer.....	12
2.4.2	Operator.....	12
2.5	Personnel qualifications	12
2.6	General Safety Instructions.....	13
2.7	Safety labels.....	13
3	Design and Function.....	14
3.1	Design	14
3.2	Function	14
4	Installation	15
4.1	Unpacking	16
4.2	Installation into the system.....	16
5	Operation	18
5.1	Normal operation.....	18
5.2	Operation under increased temperature.....	18
6	Maintenance	19
6.1	Exchange of vacuum seals	20
6.1.1	Dismount actuator / plate assembly.....	20
6.1.2	Replacement of plate seal	21
6.1.3	Mount actuator / plate assembly	21
7	Repairs	22
8	Dismounting and Storage.....	23
8.1	Dismounting	23
8.2	Storage.....	24
9	Packaging and Transport	25
9.1	Packaging	26
9.2	Transport.....	26
10	Disposal	27

11	Spare parts and accessories	28
12	Appendix	30
12.1	Safety information on contamination	30
12.2	Declaration of chemical contamination	31

1 Description of product

1.1 Important information



This symbol points to a very important statement that requires particular attention.


Example:



Leybold disclaims any liability for damages resulting from inappropriate packaging.

1.2 Identification of product

The fabrication number and part number are fixed on the product directly or by means of an identification plate.

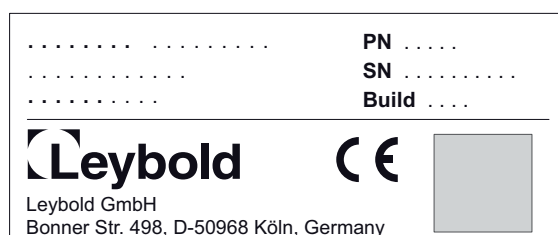

← PN: Part number
← SN: Fabrication number

Figure 1-1



In all communications with Leybold, please specify the information on the product nameplate.

1.3 Validity of the user manual



This document applies to products with the part numbers below-mentioned.

List of part numbers

Type	Part number		Type	Part number
BAV . . M AL			BAV . . M VA	
ISO K 63	10780V01		ISO K 63	10783V01
ISO K 100	10781V01		ISO K 100	10784V01
ISO K 160	on request		ISO K 160	on request

Table 1-1

1.4 Technical data

Standard valves see chapter «1.3 Validity of the user manual».

For special valves which are not listed in chapter «1.3 Validity of the user manual» the product data sheet is applicable in addition.

Material

	Material	
Item	Aluminum version	Stainless steel version
Body	Aluminium	Stainless steel (AISI 316L)
Actuator	Aluminium	Aluminium
Valve plate	AISI 316L	AISI 316L
Bellows	AISI 316 Ti (1.4571)	AISI 316 Ti (1.4571)
Bonnet seal, plate seal	Viton®	Viton®
Handwheel (Plug-in component. Removal by pulling)	Plastic	Plastic

Table 1-2

General technical data


	Value / description		
Type / Item	DN 63	DN 100	DN 160
Leak rate [mbar l/s]	≤ 1 · 10 ⁻⁹		
Pressure range: valve open [mbar], absolute	1 · 10 ⁻⁸ to 4000	1 · 10 ⁻⁸ to 2000	
Differential pressure on the plate [bar]			
In opening direction ¹	≤ 1.2		
In closing direction ¹	≤ 4	≤ 2	
Differential pressure at opening [bar]	≤ 1 in either direction		
Weight [kg]			
Angle valve: aluminum	2.9	6.0	10.0
Angle valve: stainless steel	2.8	6.5	10.0
Molecular flow conductance [l/s]	160	440	1000
Mounting position	any		
Admissible temperature [°C]			
Valve body aluminium	0 to 150		
Valve body stainless steel	0 to 150		
Handwheel	0 to 80		
Cycles until first service	20 000 at 80°C maximum and 1 bar differential pressure maximum		

Table 1-3

¹ see «Figure 3-1»

Drawings / Dimensions

Angle valve: aluminum (picture) and stainless steel

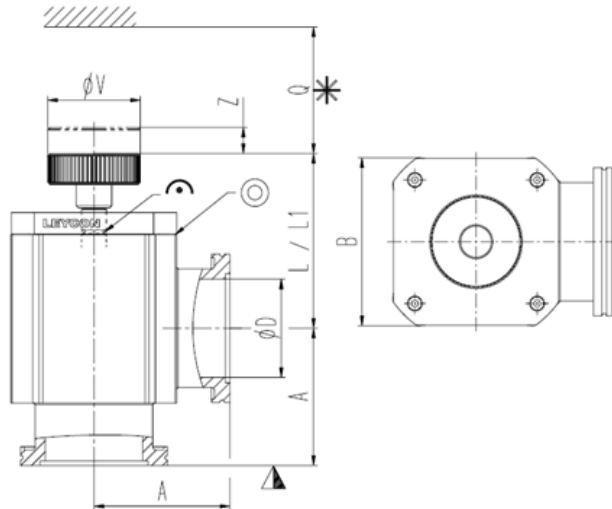

	DN			
Pos.	63	AL	VA	mm
A	88			mm
B		107.6	123	mm
D		63	66	mm
L / L1		112	111.7	mm
Q	105			mm
V	60			mm
Z ¹⁾	13.4			


¹⁾ Longer gate stroke due to transmission

L = aluminum version
L1 = stainless steel version

▽ Valve seat side
* Required for dismantling
● Mechanical position indication
⊙ Leak detection slot

Figure 1-2

Angle valve: aluminum (picture) and stainless steel

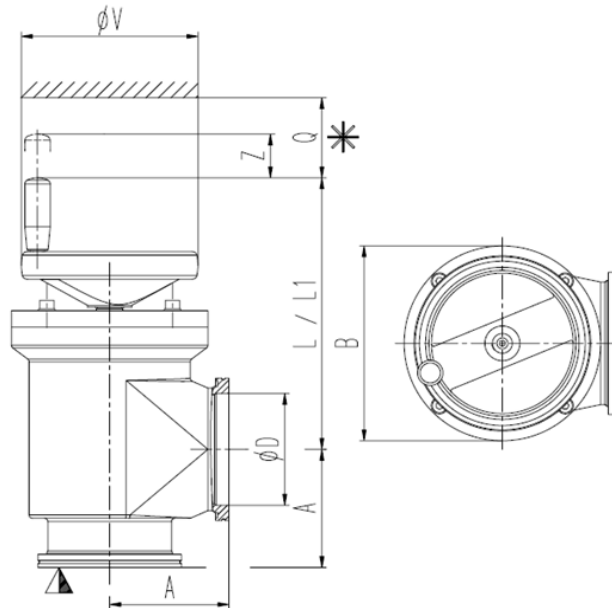

	DN			
Pos.	100	160	mm	
A	108	138	mm	
B	178	220	mm	
D	102	153	mm	
L	246.9	240.3	mm	
L1	240.3	246.8	mm	
Q	170	195	mm	
V	160	160	mm	
Z ¹⁾	21	25	mm	

¹⁾ Longer gate stroke due to transmission

L = aluminum version
L1 = stainless steel version

▽ Valve seat side
* Required for dismantling
● Mechanical position indication
⊙ Leak detection slot

Figure 1-3

1.5 Components delivered with the valve

Protective covers on both flanges.

The original document of this user manual in German language is also enclosed.

1.6 Warranty

Leybold assumes no liability if the end-user or third parties:

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories, options, and add-ons not listed in the corresponding product documentation.

Failures due to contamination or wear and tear, as well as expendable parts (e.g. seals), are not covered by the warranty.

Improperly accomplished maintenance work may reduce the safety, lifetime and performance of the product and lead to refusal of warranty claims.



Maintenance work not described in this user manual may only be carried out by the Leybold service staff or by specialists trained and authorized by Leybold.

2 Safety

2.1 Compulsory reading material

Read this chapter prior to performing any work with or on the product. It contains important information that is significant for your own personal safety. This chapter must have been read and understood by all persons who perform any kind of work with or on the product during any stage of its serviceable life.

	NOTICE
	Lack of knowledge Failing to read this manual may result in property damage. Firstly, read manual.



This user manual is an integral part of a comprehensive documentation belonging to a complete technical system. It must be stored together with the other documentation and accessible for anybody who is authorized to work with the system at any time.

2.2 Danger levels

	DANGER
	High risk Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

	WARNING
	Medium risk Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

	CAUTION
	Low risk Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

	NOTICE
	Command Indicates a hazardous situation which, if not avoided, may result in property damage.

2.3 Purpose of use

2.3.1 Permitted use

- The high vacuum angle valve BAV acts as venting and shut-off device within a vacuum system.
- The valve features ISO-K flanges and is intended for mounting within clamping flange systems.
- Use product for clean and dry vacuum applications only. Observe the specification in chapter «1.4 Technical data».

2.3.2 Adverse use

- Use of the product for liquid gas.
- Use of the product without instruction or outside of the permitted limits.
- Detaching of hazard notices, disabling safety systems.
- Conducting any kind of interventions (modifications, alterations etc.) on the product.
- Use with accessories and options, which are not mentioned in the corresponding product documentation.
- Either use, not explicitly mentioned as permitted use, applies as adverse use.

2.4 Obligations / area of responsibility

2.4.1 Manufacturer

Leybold GmbH as manufacturer is responsible for supplying the product, with its user manual and original accessories, in a completely safe condition.

2.4.2 Operator



The operator is the person in charge of the product. The operator ensures that the product is used in accordance with the instructions, and the safety of the equipment in use. Training and deployment of personnel who use the product is also the operator's charge.

The operator has the following duties:

- To know local, operative regulations regarding safety and accident prevention.
- To assure that the national laws and directives are respected.
- To understand safety indications on the product, and instructions in the user manual.
- To immediately inform the manufacturer, if safety shortcomings of the product or it's use occur.
- To check the sound condition of the product regularly and to assure the execution of the maintenance works mandated.



The end-user assumes the responsibility in conjunction with the process media used.

2.5 Personnel qualifications

	⚠ WARNING
	Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.

2.6 General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used.
Consider possible reactions between the materials and the process media.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

2.7 Safety labels

Label	Part No.	Location on valve
	DN 63/100: T-9001-155 DN 160: T-9001-156	On protective covers of flanges

Table 2-1

3 Design and Function

3.1 Design

This illustration shows an angle valve. The inline valve has a different body shape.

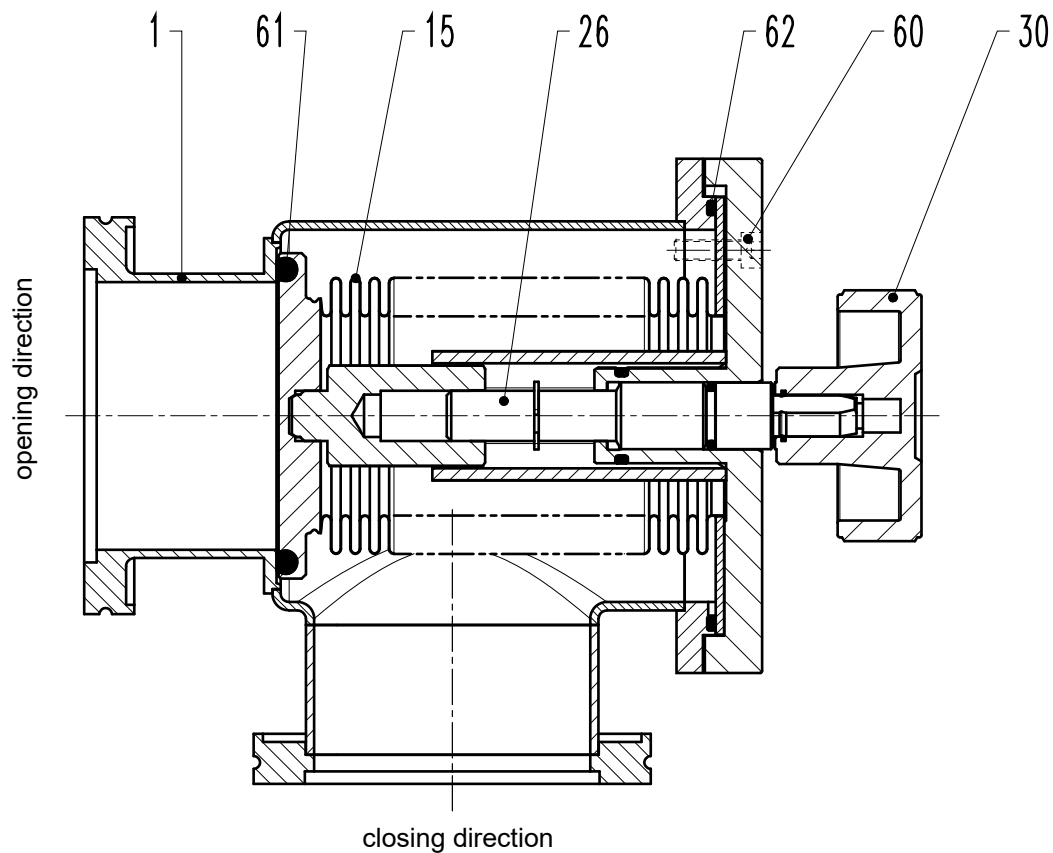


Figure 3-1

1	Body	30	Handwheel	62	Bonnet seal
15	Bellows	60	Screws		
26	Actuator complete	61	Plate seal		

3.2 Function

Valve is closed and opened by turning the handwheel.

4 Installation

The subsequent notes need to be observed for all installation works!

	 WARNING Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.
	NOTICE Contamination Product may get contaminated because of inadequate handling. Always wear cleanroom gloves when handling the product.
	NOTICE Inappropriate tools Sealing surfaces may get damaged. Do not use sharp-edged tools.

4.1 Unpacking



- Before unpacking, check whether the packaging shows transport damages and the goods could be damaged.
- Check whether the goods are complete and in impeccable condition. If you have any objections, please contact the local agency immediately; see backside of the document.
- Store the original packaging material. It may be useful if products must be returned.



Remove the protective covers from the valve only at the moment when the valve is being installed into the system. Keep unprotected sealing surfaces clean and do not damage them.

4.2 Installation into the system



! DANGER

Overpressure in the vacuum system >1 bar

Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.

Do not open any clamps while the vacuum system is pressurized. Use the type of clamps which are suited to overpressure.



! DANGER

Overpressure in the vacuum system >2.5 bar

KF flange connections with elastomer seals (e.g. O-rings) cannot withstand such pressures. Process media can thus leak and possibly damage your health.

Use O-rings provided with an outer centering ring.

1. Remove the protective lids.
2. Check and carefully clean sealing surfaces of valve flanges and counter flanges.
3. Install valve with connection components appropriate for ISO-K flanges by taking the specification in «Table 4-1» into account.

DN (nom. I. D.)		Axial tensile or compressive force «F _A »		Bending moment «M»	
mm	Inch	N	lbf	Nm	lbf · ft
63	2½	200	45	18	13
100	4	250	56	27	20
160	6	300	68	42	51

A combination of both forces «F_A» and «M» is not allowed. Please contact Leybold.

Angle valve

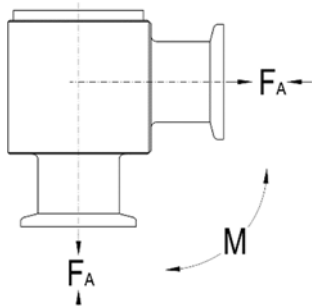


Table 4-1



Keep the protective lids.

4. Check that the vacuum connections are leak tight.

5 Operation

Standard valves see chapter «1.3 Validity of the user manual».

For special valves which are not listed in chapter «1.3 Validity of the user manual» the product data sheet is applicable in addition.

	⚠ WARNING Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.
	⚠ CAUTION Hot surfaces Risk of burning when touching hot surfaces. Take safety measures in order that the valve cannot be touched during operation.

If the valve is operated under harsh or dirty conditions, it should be cleaned / maintained before the specified service time has been reached.

5.1 Normal operation

Valve is closed and opened by turning the handwheel.

5.2 Operation under increased temperature

See chapter «1.4 Technical data».

6 Maintenance

Under clean operating conditions the valve does not need any maintenance during the specified cycle life; see chapter «1.4 Technical data».



Contamination from the process may require more frequent maintenance.

	! WARNING Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.
	! WARNING Contaminated parts Contaminated parts can be detrimental to health and environment. Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.
	! CAUTION Hot surfaces Risk of burning when touching hot surfaces. Touch hot surfaces only if the valve has cooled down.
	NOTICE Contamination Product may get contaminated. Always wear cleanroom gloves when handling the product.
	NOTICE Inappropriate tools Sealing surfaces may get damaged. Do not use sharp-edged tools.



Leybold assumes no liability and the warranty becomes null and void if maintenance works are performed, which are not covered by this user manual.

6.1 Exchange of vacuum seals

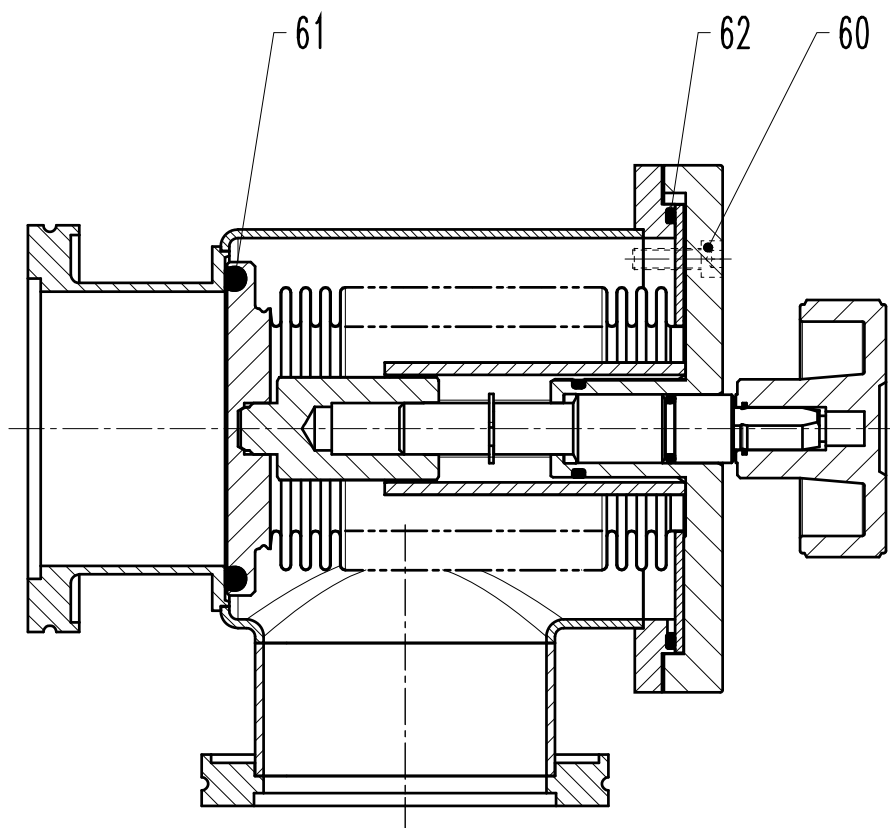


Figure 6-1

60 Screws 61 Plate seal 62 Bonnet seal

6.1.1 Dismount actuator / plate assembly

The item numbers in brackets refer to «Figure 6-1».

1. Vent the vacuum system and wait until the valve has cooled down to <55°C. Detach valve.
2. Loosen and remove screws (60) uniformly and in crosswise order.
3. Withdraw actuator / plate assembly carefully from body.
4. Remove bonnet seal (62) from groove by using an O-ring removal tool.

6.1.2 Replacement of plate seal

1. Remove plate seal (61) from groove by using an O-ring removal tool.
2. Check sealing surface and clean it with a cleanroom wiper soaked with alcohol (2% methyl ethyl ketone).
3. Put new plate seal (61) on groove and press it into groove at 4 opposite spots.
4. Press remaining sections uniformly into groove.

6.1.3 Mount actuator / plate assembly

1. Check sealing surfaces of bonnet flange / valve seat and clean it with a cleanroom wiper.
2. Put bonnet seal (62) into body.
3. Insert actuator / plate assembly carefully.
4. Fasten screws (60) uniformly and in crosswise order in 2 to 3 rounds.

7 Repairs

Repairs may only be carried out by qualified personnel. We recommend having this work carried out by one of our service centers.

You will find the addresses of the service centers on the backside of the document. When contacting us, please always specify the fabrication number of the valve; see chapter «1.2 Identification of product».

8 Dismounting and Storage

	⚠ WARNING Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.
	⚠ CAUTION Hot surfaces Risk of burning when touching hot surfaces. Touch hot surfaces only if the valve has cooled down.
	NOTICE Contamination Product may get contaminated. Always wear cleanroom gloves when handling the product.

8.1 Dismounting

	⚠ WARNING Contaminated parts Contaminated parts can be detrimental to health and environment. Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.
---	--

1. Vent the vacuum system and wait until the valve has cooled down to <55°C.
2. Dismount valve from system, attach the protective lids.

8.2 Storage



NOTICE

Wrong storage

Inappropriate temperatures and humidity may cause damage to the product.

Valve must be stored at:

- relative humidity between 10% and 70%
- temperature between 10 °C and +50 °C
- non-condensing environment

1. Clean / decontaminate valve.
2. Cover all valve openings with protective covers or foils.

9 Packaging and Transport

	 WARNING Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.
	 WARNING Harmful substances Risk of injury in case of contact with harmful substances. Remove harmful substances (e. g. toxic, caustic or microbiological ones) from product before you return the product to Leybold.
	NOTICE Inappropriate packaging Product may get damaged if inappropriate packaging material is used. Always use the original packaging material and handle product with care.



When returning products, the completed form «12.2 Declaration of chemical contamination» must be enclosed to the shipment.

9.1 Packaging

	NOTICE
	Valve in open position Valve mechanism may get damaged if valve gate is in open position. Make sure that the valve is closed.

1. Cover all valve openings with protective covers or foils.
2. Pack valve appropriately, by using the original packaging material.



Leybold disclaims any liability for damages resulting from inappropriate packaging.

9.2 Transport

	NOTICE
	Inappropriate packaging Product may get damaged if inappropriate packaging material is used. Always use the original packaging material and handle product with care.



Leybold disclaims any liability for damages resulting from inappropriate packaging.

10 Disposal

	 WARNING
	Harmful substances Environmental pollution. Discard products and parts according to the local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- **Contaminated components**
Contaminated components (radioactive, toxic, caustic, microbiological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- **Other components**
Such components must be separated according to their materials and recycled.

11 Spare parts and accessories



NOTICE

Non-original spare parts

Non-original spare parts may cause damage to the product.

Use original spare parts from Leybold only.



When you place an order for spare parts, please specify the fabrication number of the valve; see chapter «1.2 Identification of product». This is to ensure that the appropriate spare parts are supplied.

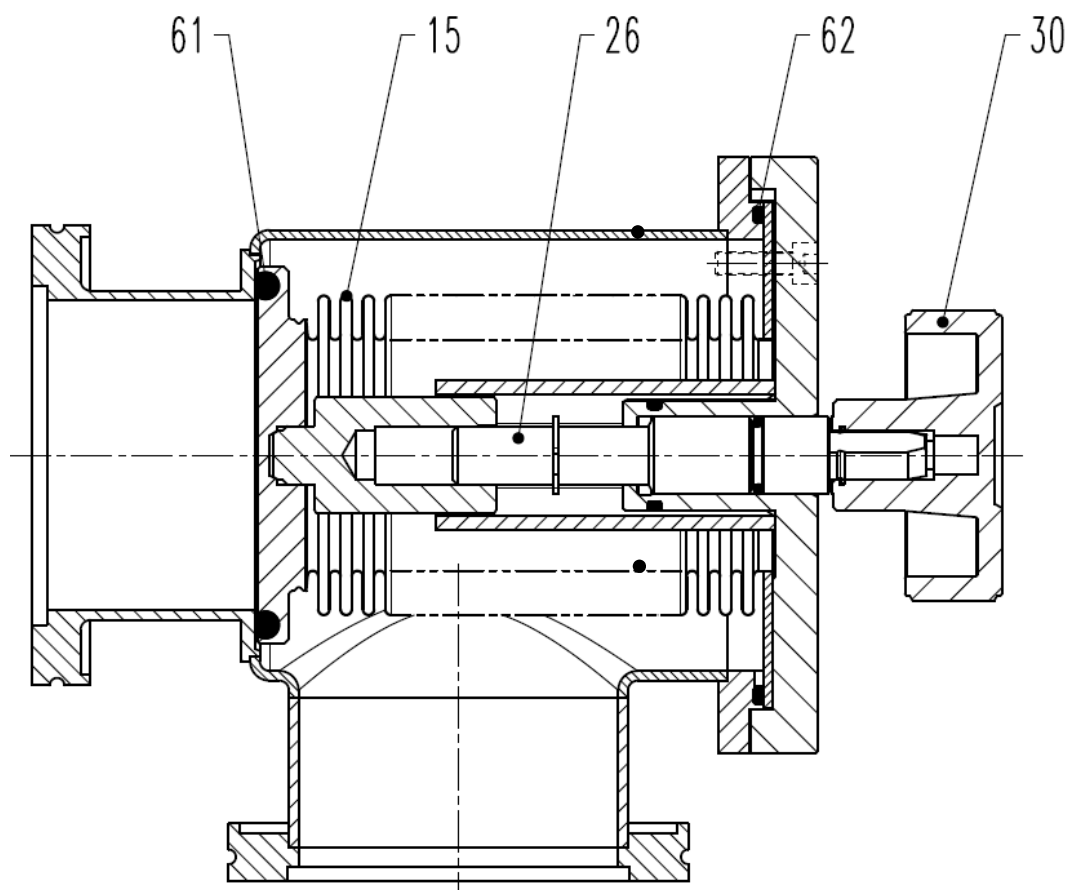


Figure 11-1

Item	Description	Part No.		
		DN 63	DN 100	DN 160
15	Bellows	E547808	E702839	-
26a	Manual actuator complete for AI body	E472915	E702825	-
26b	Manual actuator complete for VA body	E475266	E702825	-
30	Handwheel	E245913	E540461	-
61 + 62	Seal kit	EK357196	E577551	-

Table 11-1

12 Appendix

12.1 Safety information on contamination

Aim and purpose

Each entrepreneur (operating company) is responsible for the health and safety of its employees. The responsibility extends to external personnel carrying out repairs on the site of the operating company and to personnel of contractors.

The enclosed declaration shall inform contractors about contamination of compressors, vacuum pumps and vacuum components returned for repair. Due to this information, the contractor is capable of taking the necessary safety precautions when carrying out repairs.



The same regulations apply for **on-site repairs**.

Preparation for dispatch

Before dispatching the product the operating company must fill out the declaration as per chapter «12.2 Declaration of chemical contamination» and enclose it to the shipping documents. The shipping instructions stated in the relevant user manual must be observed.

For example:

- Drain all service fluids
- Remove filter elements, where applicable
- Close all openings airtight
- Pack products appropriately
- Dispatch products in suitable transport containers



Attach declaration on contamination to the **outside** of the transport container.

12.2 Declaration of chemical contamination

Declaration of Contamination of Compressors, Vacuum Pumps and Components

The repair and / or servicing of compressors, vacuum pumps and components will be carried out only if a correctly completed declaration has been submitted. Non-completion will result in delay. The manufacturer can refuse to accept any equipment without a declaration.

A separate declaration has to be completed for each single component.

This declaration may be completed and signed only by authorized and qualified staff.

Customer/Dep./Institute : _____ Address : _____ _____ Person to contact: _____ Phone : _____ Fax: _____ End user: _____	Reason for return: ☒ applicable please mark Repair: ☐ chargeable ☐ warranty Exchange: ☐ chargeable ☐ warranty ☐ Exchange already arranged / received Return only: ☐ rent ☐ loan ☐ for credit Calibration: ☐ DKD ☐ Factory-calibr. ☐ Quality test certificate DIN 55350-18-4.2.1																																																													
A. Description of the Leybold product: _____ Failure description: _____ Material description : _____ Catalog number: _____ Additional parts: _____ Serial number: _____ Application-Tool: _____ Type of oil (ForeVacuum-Pumps) : _____ Application- Process: _____																																																														
B. Condition of the equipment <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">No¹⁾</th> <th style="width: 10%; text-align: center;">Yes</th> <th style="width: 10%; text-align: center;">No</th> <th style="width: 30%;"></th> </tr> </thead> <tbody> <tr> <td>1. Has the equipment been used</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> <td rowspan="4" style="text-align: center; vertical-align: middle;"> → </td> </tr> <tr> <td>2. Drained (Product/service fluid)</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> </tr> <tr> <td>3. All openings sealed airtight</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> </tr> <tr> <td>4. Purged</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> <td style="text-align: center;">☐</td> </tr> <tr> <td colspan="4"> If yes, which cleaning agent _____ and which method of cleaning _____ </td> <td></td> </tr> <tr> <td colspan="4"> ¹⁾ If answered with "No", go to D. ← </td> <td></td> </tr> <tr> <td colspan="4"></td> <td> Contamination : <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">No¹⁾</th> <th style="width: 10%; text-align: center;">Yes</th> </tr> </thead> <tbody> <tr><td>toxic</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>corrosive</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>flammable</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>explosive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>radioactive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>microbiological ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>other harmful substances</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> </tbody> </table> </td> </tr> </tbody> </table>			No ¹⁾	Yes	No		1. Has the equipment been used	☐	☐	☐	→	2. Drained (Product/service fluid)	☐	☐	☐	3. All openings sealed airtight	☐	☐	☐	4. Purged	☐	☐	☐	If yes, which cleaning agent _____ and which method of cleaning _____					¹⁾ If answered with "No", go to D. ←									Contamination : <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">No¹⁾</th> <th style="width: 10%; text-align: center;">Yes</th> </tr> </thead> <tbody> <tr><td>toxic</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>corrosive</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>flammable</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>explosive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>radioactive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>microbiological ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>other harmful substances</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> </tbody> </table>		No ¹⁾	Yes	toxic	☐	☐	corrosive	☐	☐	flammable	☐	☐	explosive ²⁾	☐	☐	radioactive ²⁾	☐	☐	microbiological ²⁾	☐	☐	other harmful substances	☐	☐
	No ¹⁾	Yes	No																																																											
1. Has the equipment been used	☐	☐	☐	→																																																										
2. Drained (Product/service fluid)	☐	☐	☐																																																											
3. All openings sealed airtight	☐	☐	☐																																																											
4. Purged	☐	☐	☐																																																											
If yes, which cleaning agent _____ and which method of cleaning _____																																																														
¹⁾ If answered with "No", go to D. ←																																																														
				Contamination : <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">No¹⁾</th> <th style="width: 10%; text-align: center;">Yes</th> </tr> </thead> <tbody> <tr><td>toxic</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>corrosive</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>flammable</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>explosive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>radioactive ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>microbiological ²⁾</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> <tr><td>other harmful substances</td><td style="text-align: center;">☐</td><td style="text-align: center;">☐</td></tr> </tbody> </table>		No ¹⁾	Yes	toxic	☐	☐	corrosive	☐	☐	flammable	☐	☐	explosive ²⁾	☐	☐	radioactive ²⁾	☐	☐	microbiological ²⁾	☐	☐	other harmful substances	☐	☐																																		
	No ¹⁾	Yes																																																												
toxic	☐	☐																																																												
corrosive	☐	☐																																																												
flammable	☐	☐																																																												
explosive ²⁾	☐	☐																																																												
radioactive ²⁾	☐	☐																																																												
microbiological ²⁾	☐	☐																																																												
other harmful substances	☐	☐																																																												
C. Description of processed substances (Please fill in absolutely) 1. What substances have come into contact with the equipment ? Trade name and / or chemical term of service fluids and substances processed, properties of the substances According to safety data sheet (e.g. toxic, inflammable, corrosive, radioactive) <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">X</td> <td style="width: 40%;">Tradename:</td> <td style="width: 55%;">Chemical name:</td> </tr> <tr><td></td><td>a)</td><td></td></tr> <tr><td></td><td>b)</td><td></td></tr> <tr><td></td><td>c)</td><td></td></tr> <tr><td></td><td>d)</td><td></td></tr> </table> 2. Are these substances harmful ? No ☐ Yes ☐ 3. Dangerous decomposition products when heated ? No ☐ Yes ☐ If yes, which ? _____		X	Tradename:	Chemical name:		a)			b)			c)			d)																																															
X	Tradename:	Chemical name:																																																												
	a)																																																													
	b)																																																													
	c)																																																													
	d)																																																													
²⁾ Components contaminated by microbiological, explosive or radioactive products/substances will not be accepted without written evidence of decontamination.																																																														

D. Legally binding declaration

I / we hereby declare that the information supplied on this form is accurate and sufficient to judge any contamination level.

Name of authorized person (block letters) : _____

Date _____

signature of authorized person _____

firm stamp

Notes



300503443_000_A1

Čeština (024)	Návod k použití přiložený k tomuto výrobku je standardně k dispozici v němčině a angličtině. Potřebujete-li návod k použití ve svém jazyce (v rámci EU), obraťte se prosím na některou z poboček Leybold.
Dansk (016)	Den medfølgende brugsvejledning til deres produkt fås på to sprog, engelsk og tysk. Hvis en brugsvejledning på eget europæiske sprog ønskes, bedes man tage kontakt til ens Leybold repræsentant.
Deutsch (001)	Die diesem Produkt beigelegte Gebrauchsanleitung liegt standardmäßig in den Sprachen Deutsch und Englisch vor. Für eine Gebrauchsanleitung in Ihrer Landessprache (EU) wenden Sie sich an die Leybold-Niederlassung.
Eesti (028)	Selle tootega kaasnev kasutusjuhend on standardselt saksa ja inglise keeles. Kasutusjuhendi saamiseks teie riigikeeles (EL) pöörduge Leybold-filiaali poole.
Ελληνικά (017)	Οι οδηγίες χρήσης που συνοδεύουν αυτό το προϊόν είναι διαθέσιμες στα γερμανικά και στα αγγλικά. Για οδηγίες χρήσης στη γλώσσα σας (ΕΕ) απευθυνθείτε σε υποκατάστημα της Leybold.
English (002)	The instruction manual supplied with your product is available in two different standard European languages, English and German. If you wish to have a manual in your own European language, please contact your Leybold representative.
Español (006)	Las instrucciones de operación, adjuntas al presente producto, son en alemán e inglés. Para obtener las instrucciones en su idioma nacional (EU), póngase en contacto con su representante de Leybold.
Français (003)	Le mode d'emploi fourni avec ce produit est rédigé en anglais et en allemand. N'hésitez pas à contacter votre agence Leybold si vous avez besoin du mode d'emploi traduit dans la langue de votre pays (union européenne).
Hrvatski (029)	Uz ovaj proizvod standardno su priložena uputstva za upotrebu na njemačkom i engleskom jeziku. Za uputstva na jeziku Vaše zemlje (u EU), obratite se poslovnici Leybold-a.
Italiano (004)	Le istruzioni per l'uso allegate al presente prodotto sono disponibili di norma in lingua tedesca e inglese. Per le istruzioni per l'uso nella propria lingua (UE) si prega di rivolgersi alla filiale Leybold.
Íslenska (034)	Leiðarvísirinn sem fylgir vörinni er gefinn út á tveimur tungumálum, þýsku og ensku. Hafið samband við næsta útibú Leybold varðandi leiðarvísi á tungumáli ykkar (ESB).
Latviešu (030)	Kopā ar jūsu produktu piegādātā lietošanas instrukcija ir pieejama divās dažādās standart Eiropas valodās, angļu un vācu. Ja jūs vēlaties saņemt instrukciju citā Eiropas valodā, sazinieties ar savu Leybold pārstāvi.
Lietuvių (031)	Prie šio produkto pridedamos naudotojo instrukcijos paprastai pateikiamos dviemomis kalbomis - vokiečių ir anglų. Dėl instrukcijos jūsų valstybine kalba (ES), kreipkitės į Leybold atstovą.
Magyar (033)	A termékhez mellékelte használati útmutató angol és német nyelvű. Ha a használati útmutatót a saját nyelvén (EU) szeretné megkapni, akkor kérjük forduljon az egyik Leybold képviselőhez.
Nederlands (010)	De bij dit product bijgevoegde gebruiksaanwijzing is standaard in het Duits en Engels beschikbaar. Voor een gebruiksaanwijzing in uw taal (EU), neem dan contact op met het Leybold-filiaal.
Norsk (020)	Bruksanvisningen som medfølger dette produktet finnes som standard i språkversjonene engelsk og tysk. Ønsker du en bruksanvisning på ditt nasjonale språk (innen EU), henvender du deg til en Leybold-forhandler.
Polski (022)	Instrukcja obsługi załączona do tego produktu dostępna jest w języku niemieckim i angielskim. Po instrukcję obsługi w innym języku urzędowym Unii Europejskiej proszę zgłosić się do siedziby Leybold.
Português (005)	As Instruções de Uso anexas a este produto são fornecidas normalmente nas línguas alemã e inglesa. Para Instruções de Uso na sua língua (UE), queira dirigir-se à sucursal de Leybold.
Română (013)	Manualul de utilizare anexat acestui produs este disponibil în mod standard în limbile germană și engleză. Pentru a obține un manual de utilizare în limba țării dumneavoastră (EU), vă rugăm să vă adresați unei reprezentanțe Leybold.
Slovenčina (023)	Návod na používanie priložený k tomuto produktu je štandardne k dispozícii v nemeckom a anglickom jazyku. Ak potrebujete návod na používanie v jazyku svojej krajiny (EÚ), obráťte sa na pobočku Leybold.
Slovenščina (032)	Priložena navodila so na voljo v dveh različnih evropskih jezikih, angleščini in nemščini. Če želite navodila za uporabo v svojem jeziku (EU), se obrnite na predstavnika Leybold.
Suomi (019)	Tähän tuotteeneseen liittyvä käyttöopas on saksan- ja englanninkielellä. Mikäli haluatte käyttöoppaan maanne kielellä (EU), voitte käätyä vastaavan Leybold-toimipisteen puoleen.
Svenska (009)	Den användarmanual som följer med denna produkt finns i standardutförandet på tyska och engelska. Vänd dig till en Leybold-återförsäljare för en användarmanual på ditt språk (gäller EU-språk).
Türkçe (018)	Bu ürünün ekinde bulunan kullanım kılavuzu, standart olarak Almanca ve İngilizce dillerinde bulunmaktadır. Kendi dilinizdeki (AB) kullanım kılavuzu için bir Leybold-Şubesine başvurun.
Български (027)	Приложеният към този продукт указания за употреба в общия случай са налични на немски и на английски език. За указания на Вашия език (ЕС) можете да се обърнете към представителството на Leybold.
Русский (007)	В стандартную комплектацию изделия входит руководство по эксплуатации на немецком и английском языках. За руководством по эксплуатации на языке Вашей страны (ЕС), пожалуйста, обращайтесь в представительство Leybold.

Sales and Service

Germany

Leybold GmbH
Sales, Service, Support Center (3SC)
Bonner Straße 498
D-50968 Cologne
T: +49-(0)221-347 1234
F: +49-(0)221-347 31234
sales@leybold.com
www.leybold.com

Leybold GmbH
Sales Area North
Branch Office Berlin
Industriestraße 10b
D-12099 Berlin
T: +49-(0)30-435 609 0
F: +49-(0)30-435 609 10
sales.bn@leybold.com

Leybold GmbH
Sales Office South
Branch Office Munich
Karl-Hammerschmidt-Straße 34
D-85609 Aschheim-Dornach
T: +49-(0)89-357 33 9-10
F: +49-(0)89-357 33 9-33
sales.mn@leybold.com
service.mn@leybold.com

Leybold Dresden GmbH
Service Competence Center
Zur Wetterwarte 50, Haus 304
D-01109 Dresden
T: +49-(0)351-88 55 00
F: +49-(0)351-88 55 041
info.dr@leybold.com

Europe

Belgium

Leybold Nederland B.V.
Belgisch bijkantoor
Leuvensesteenweg 542-9A
B-1930 Zaventem
Sales:
T: +32-2-711 00 83
F: +32-2-720 83 38
sales.zv@leybold.com
Service:
T: +32-2-711 00 82
F: +32-2-720 83 38
service.zv@leybold.com

France

Leybold France S.A.S.
Parc du Technopolis, Bâtiment Beta
3, avenue du Canada
F-91940 Les Ulis cedex
Sales and Service:
T: +33-1-69 82 48 00
F: +33-1-69 07 57 38
info.ctb@leybold.com
sales.ctb@leybold.com

Leybold France S.A.S.
Valence Factory
640, Rue A. Bergès
B.P. 107
F-26501 Bourg-lès-Valence Cedex
T: +33-4-75 82 33 00
F: +33-4-75 82 92 69
marketing.vc@leybold.com

Great Britain

Leybold UK LTD.
Unit 9
Silverglade Business Park
Leatherhead Road
Chessington
Surrey (London)
KT9 2QL
Sales:
T: +44-13-7273 7300
F: +44-13-7273 7301
sales.ln@leybold.com
Service:
T: +44-13-7273 7320
F: +44-13-7273 7303
service.ln@leybold.com

Italy

Leybold Italia S.r.l.
Via Trasimeno 8
I-20128 Mailand
Sales:
T: +39-02-27 22 31
F: +39-02-27 20 96 41
sales.mi@leybold.com
Service:
T: +39-02-27 22 31
F: +39-02-27 22 32 17
service.mi@leybold.com

Netherlands

Leybold Nederland B.V.
Floridadreef 102
NL-3565 AM Utrecht
Sales and Service:
T: +31-(30) 242 63 30
F: +31-(30) 242 63 31
sales.ut@leybold.com
service.ut@leybold.com

Switzerland

Leybold Schweiz AG, Pfäffikon
Churerstrasse 120
CH-8808 Pfäffikon
Warehouse and shipping address:
Riedthofstrasse 214
CH-8105 Regensdorf
Sales:
T: +41-44-308 40 50
F: +41-44-302 43 73
sales.zh@leybold.com
Service:
T: +41-44-308 40 62
F: +41-44-308 40 60
service.zh@leybold.com

Spain

Leybold Spain, S.A.
Cl. Huelva, 7
E-08940 Cornelià de Llobregat
(Barcelona)
Sales:
T: +34-93-666 43 11
F: +34-93-666 43 70
sales.ba@leybold.com
Service:
T: +34-93-666 46 11
F: +34-93-685 43 70
service.ba@leybold.com

America

USA

Leybold USA Inc.
5700 Mellon Road
USA-Export, PA 15632
T: +1-724-327-5700
F: +1-724-325-3577
info.ex@leybold.com
Sales:
T: +1-724-327-5700
F: +1-724-333-1217
Service:
T: +1-724-327-5700
F: +1-724-325-3577

Brazil

Leybold Brasil
Rod. Vice-Prefeito Hermenegildo Tonolli,
nº. 4413-6B
Distrito Industrial
Jundiaí – SP
CEP 13.212-315
Sales and Service:
T: +55 11 3395 3180
F: +55 11 99467 5934
sales.ju@leybold.com
service.ju@leybold.com

Asia

P. R. China

Leybold (Tianjin)
International Trade Co. Ltd.
Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400
China
Sales and Service:
T: +86-22-2697 0808
F: +86-22-2697 4061
F: +86-22-2697 2017
sales.tj@leybold.com
service.tj@leybold.com

India

Leybold India Pvt Ltd.
No. 82(P), 4th Phase
K.I.A.D.B. Plot
Bommasandra Industrial Area
Bangalore – 560 099
India
Sales and Service:
T: +91-80-2783 9925
F: +91-80-2783 9926
sales.bgl@leybold.com
service.bgl@leybold.com

Japan

Leybold Japan Co., Ltd.
Headquarters
Shin-Yokohama A.K.Bldg., 4th floor
3-23-3, Shin-Yokohama
Kohoku-ku, Yokohama-shi
Kanawaga 222-0033
Japan
Sales:
T: +81-45-471-3330
F: +81-45-471 3323
sales.yh@leybold.com

Leybold Japan Co., Ltd.
Tsukuba Technical Service Center
1959, Kami-yokoba
Tsukuba-shi, Ibaraki-shi 305-0854
Japan
Service:
T: +81-29 839 5480
F: +81-29 839 5485
service.iik@leybold.com

Malaysia

Leybold Malaysia
Leybold Singapore Pte Ltd.
No. 1 Jalan Hi-Tech 2/6
Kulim Hi-Tech Park
Kulim, Kedah Darul
Aman 09000
Malaysia
Sales and Service:
T: +604 4020 222
F: +604 4020 221
sales.ku@leybold.com
service.ku@leybold.com

South Korea

Leybold Korea Ltd.
3F. Jellzone 2 Tower
Jeongja-dong 159-4
Bundang-gu Sungnam-si
Gyeonggi-do
Bundang 463-384, Korea
Sales:
T: +82-31 785 1367
F: +82-31 785 1359
sales.bd@leybold.com
Service:
623-7, Upsung-Dong
Cheonan-Si
Chungcheongnam-Do
Korea 330-290
T: +82-41 589 3035
F: +82-41 588 0166
service.cn@leybold.com

Singapore

Leybold Singapore Pte Ltd.
8 Commonwealth Lane #01-01
Singapore 149555
Singapore
Sales and Service:
T: +65-6303 7030
F: +65-6773 0039
sales.sg@leybold.com
service.sg@leybold.com

Taiwan

Leybold Taiwan Ltd.
No 416-1, Sec. 3
Chunghsin Rd., Chutung
Hsinchu County 310
Taiwan, R.O.C.
Sales and Service:
T: +886-3-500 1688
F: +886-3-583 3999
sales.hc@leybold.com
service.hc@leybold.com

Headquarter
Leybold GmbH
Bonner Straße 498
D-50968 Cologne
T: +49-(0)221 347 0
F: +49-(0)221-347 1250
info@leybold.com



www.leybold.com